


Smart Gardener's workshop

The greenhouse designed
to be your ultimate workspace.

owners manual

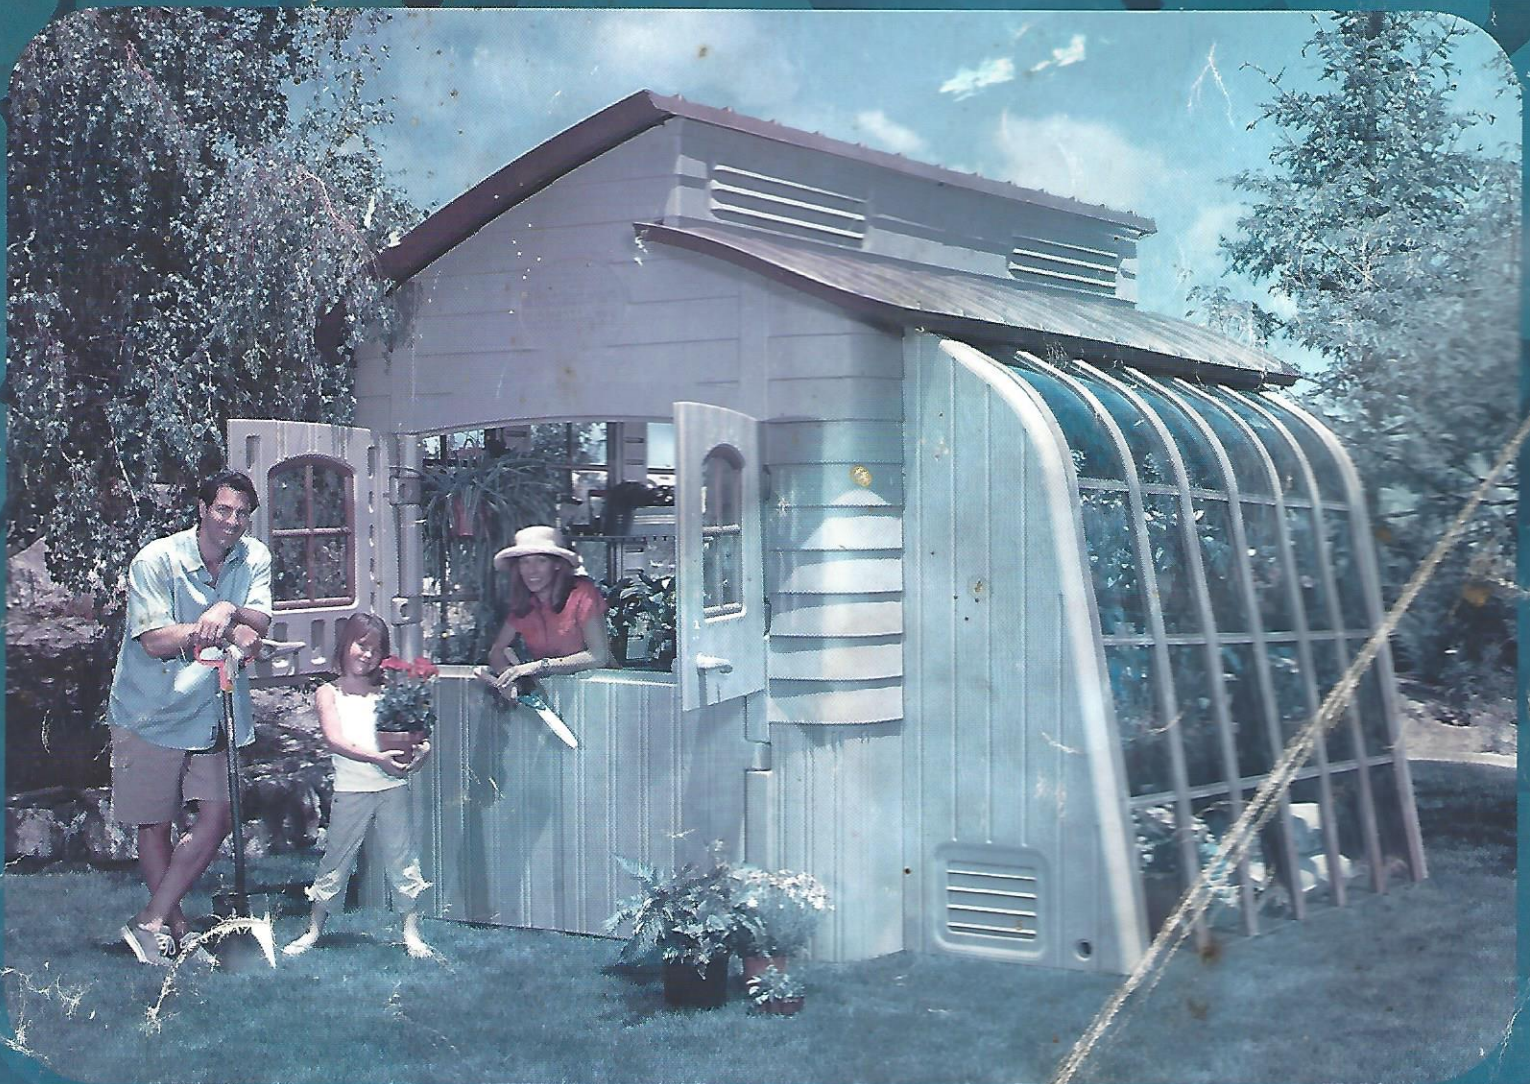

Item# 15114

Copyright 2004
Thinking Outside LLC

 thinking
outside

Smart Gardener's workshop

The greenhouse designed
to be your ultimate workspace.

Important Information About Building Your Greenhouse

Consult all local building codes, as well as city and county ordinances, to ensure that the construction of the Smart Gardener's Greenhouse does not require a building permit. Proper building permit documentation may be required in your neighborhood, and it would be unfortunate to learn this after constructing the Greenhouse.

TOOLS NEEDED TO ASSEMBLE THE SMART GARDENER'S WORKSHOP

Phillips Screwdriver (#1)

Easydriver (Included - ITM# 44065-02)

2 - 6' Step Ladders (Minimum)


Utility Knife

It Is Recommended That 3 People Aid
In The Process Of Assembling The
Roof Portions.

SURFACE MUST BE LEVELED BEFORE INSTALLATION

We recommend building a level work space with compacted road base or a cement patio style surface. If the surface is not properly leveled, the Smart Gardener's Greenhouse will not assemble correctly. Proper surface leveling will save you time in the long run, so please do not ignore this step.

**CAUTION: USE ONLY SOFT COTTON TOWELS TO
CLEAN THE GREENHOUSE WINDOWS. PAPER TOWELS
OR OTHER ROUGH MATERIALS MAY PERMANENTLY
SCRATCH THE WINDOW SURFACE.**

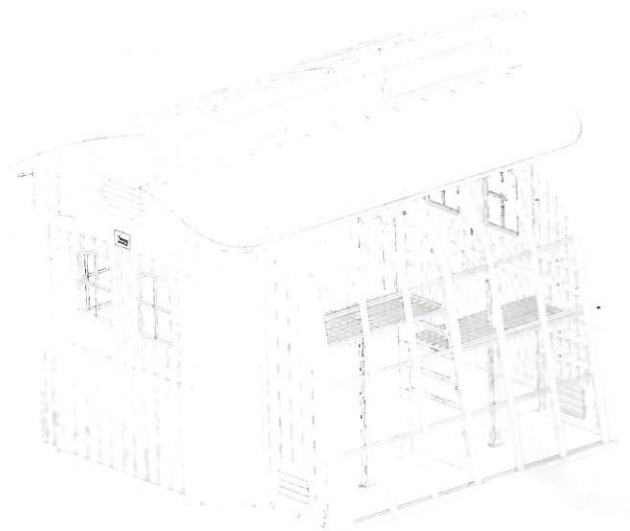

SMART GARDENER'S WORKSHOP

DIMENSIONS – 11.5'W X 12.5'L X 10.5'H

For replacement parts please
Call Thinking Outside Customer Service at

1-888-896-3001

Bill Of Materials For Smart Gardener's Workshop Plastic Injection Molded Components

DESCRIPTION	ITM #	QUANTITY
SKYLIGHT (MAIN ROOF)	44316	2
LEFT SIDE WINDOW FRAME INNER	44317A	4
LEFT SIDE WINDOW FRAME OUTER	44317B	4
LEFT SIDE WINDOW PANES	44318	8
INSIDE HINGE COVER	44319A	16
DOOR LATCH	44319B	2
HOSE CAP	44319C	2
GREENHOUSE FLAT WINDOW PANES	44320	18
GREENHOUSE ARC WINDOW PANES	44321	6
FLOOR LOCKING WEDGE	44322	35 (INCLUDES 2 SPARES)
EASYBOLT™	44323	190 (INCLUDES 9 SPARES)
POTTING TABLE TUB	44324	2
SOIL HOPPER REAR	44123	1
EASYNUT™	44124	54 (INCLUDES 6 SPARES)
DOOR WINDOW PANES	44040	4
DOOR WINDOW FRAME INNER	44041A	4
DOOR WINDOW FRAME OUTER	44041B	4
HASP BODY	44030A	2
HASP CLIP	44030B	2
COTTER PIN	44030C	2
INNER HANDLES	44119A	4
LH OUTER HANDLES	44119B	2
RH OUTER HANDLES	44119C	2
POTTING TABLE GRATE	44314	2
POTTING TABLE SHELF	44315	2
GREENHOUSE SHELF BRACE	44126	2
GREENHOUSE SHELF	44309	4
LH CORNER POST SHELF	44310A	2
RH CORNER POST SHELF	44310B	2
LEFT SIDE WINDOW SHELF	44311	1
UPPER SHELF (ABOVE DOORS)	44312	2
EASYDRIVER	44065-02	3

Bill Of Material For Smart Gardener's Workshop Other Components

DESCRIPTION	ITM #	QUANTITY
#10 x 3/4" SELF TAPPING SCREW	HW181	30 (INCLUDES 2 SPARES)
1/4" x 1.50" SELF TAPPING SCREW	HW182	98 (INCLUDES 4 SPARES)

Bill Of Materials For Smart Gardener's Workshop Structural Foam Components

DESCRIPTION	ITM #	QUANTITY
FRONT MAIN FLOOR	44300	1
REAR MAIN FLOOR	44301	1
FRONT GREENHOUSE FLOOR	44302	1
REAR GREENHOUSE FLOOR	44303	1
FRONT MAIN ROOF	44304	1
REAR MAIN ROOF	44305	1
FRONT GREENHOUSE ROOF	44306	1
REAR GREENHOUSE ROOF	44307	1
GREENHOUSE MID-BRACE	44308	1
GREENHOUSE BRACE INNER	44313A	7
GREENHOUSE BRACE OUTER	44313B	7
GREENHOUSE CROSS BRACE	44313C	6
FRONT I-BEAM SUPPORT	44122A	1
REAR I-BEAM SUPPORT	44122B	1
POTTING TABLE TOP	44121	1


Bill Of Materials For Smart Gardener's Workshop Blow Molded Components

DESCRIPTION	ITM #	QUANTITY
FRONT LEFT CORNER POST	44101	1
FRONT RIGHT CORNER POST	44102	1
REAR LEFT CORNER POST	44103	1
REAR RIGHT CORNER POST	44104	1
LEFT UPPER DOOR	44105	2
RIGHT UPPER DOOR	44106	2
LEFT LOWER DOOR	44107	2
RIGHT LOWER DOOR	44108	2
FRONT UPPER PANEL (ABOVE DOORS)	44109	1
REAR UPPER PANEL (ABOVE DOORS)	44110	1
FRONT GREENHOUSE END PANEL	44111	1
REAR GREENHOUSE END PANEL	44112	1
POTTING TABLE LEG	44113	3
POTTING TABLE LEG SUPPORT	44114	3
LEFT SIDE PANEL (WITH SOIL HOPPER)	44115	1
LEFT SIDE END PANEL	44116	1
LEFT SIDE CENTER PANEL	44117	2
SOIL HOPPER FRONT	44118	1

Step 1

Slide Mid Brace (44308) onto Greenhouse Front Floor Panel (44302). (Figure 1)


Figure 1

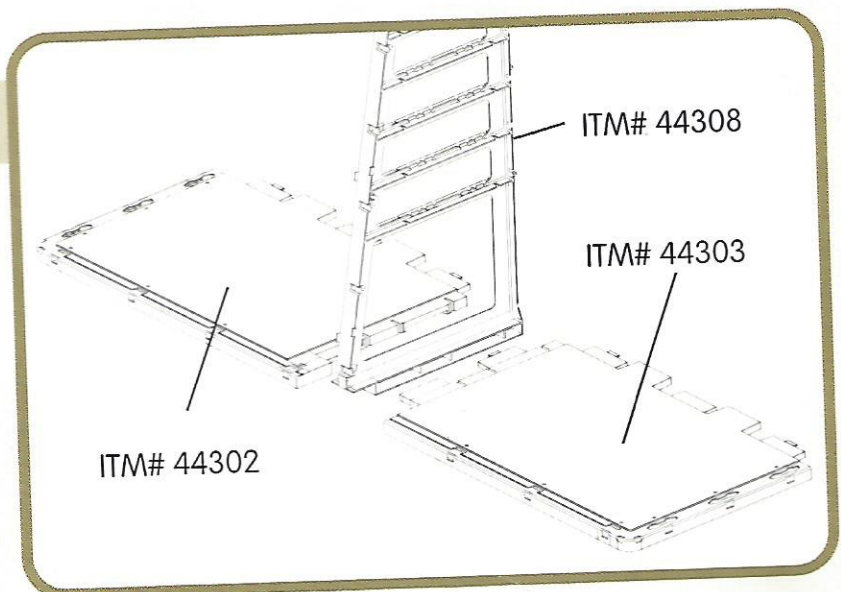

Step 2

Slide Greenhouse Rear Floor Panel (44303) onto this assembly (Figure 1) and secure with 2- 1/4" x 1.50" self-tapping screws (HW182). (Figure 2)


Figure 2

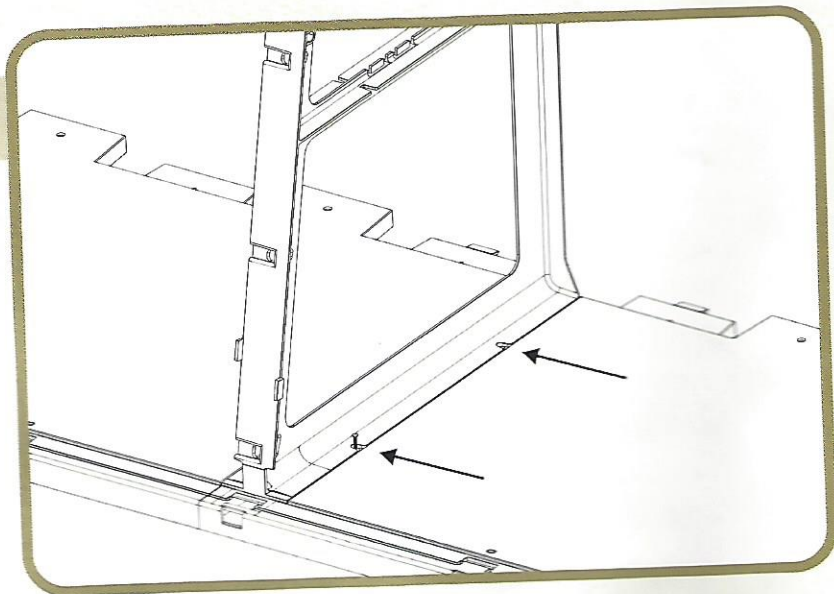

Step 3

Slide both halves of the Main Floors together and secure with 8 - 1/4" x 1.50" self tapping screws (HW182). (Figure 3)

Figure 3

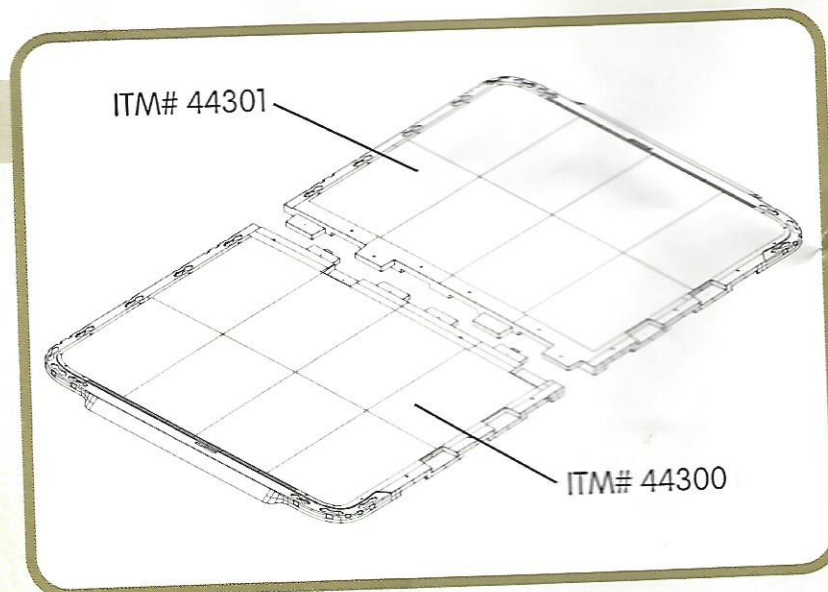

Step 4

Figure 4

Slide Greenhouse assembly into Main Floor assembly and secure with 10 – 1/4" x 1.50" self tapping screws (HW182). (Figure 4)

For individuals who reside in high wind areas, the Floors can be secured to the ground by installing ground stakes in 8 locations. (Ground stakes not included with shed assembly). (Figure 4A)


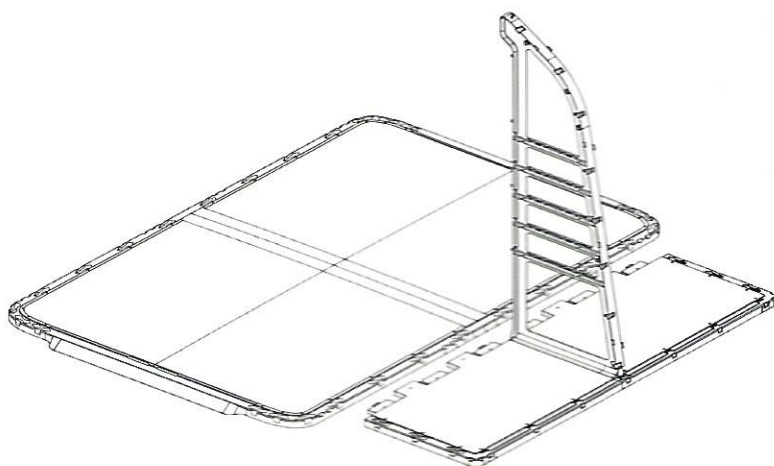



Figure 4A

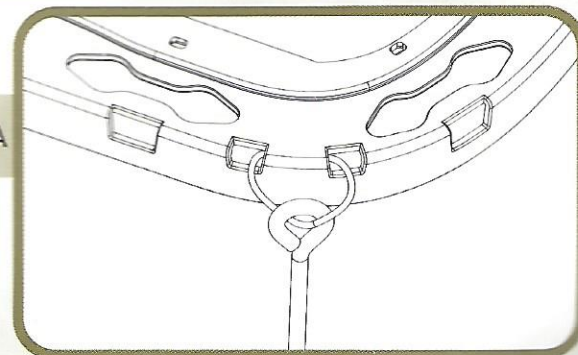

Step 5

Figure 5


Lay Front Upper Panel (44109) down on flat ground. Attach Front Left Corner Post (44101) and Front Right Corner Post (44102) and secure with 6 EasyBolts™ (44323). (Figures 5&6) ***NOTE DO NOT OVER TIGHTEN EASYBOLTS AS THIS MAY BREAK OR STRIP THE THREADS**

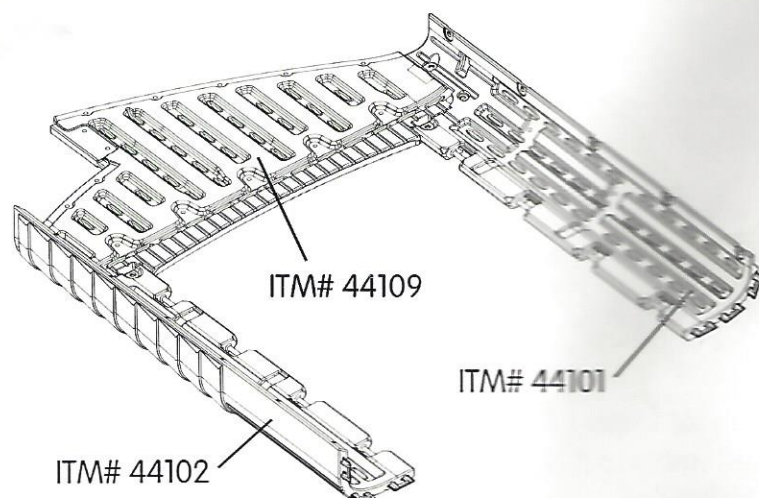

Step 6

Figure 6


Repeat step 5 with Rear Upper Panel (44110), Rear Left Corner Post (44103) and Rear Right Corner Post (44104).

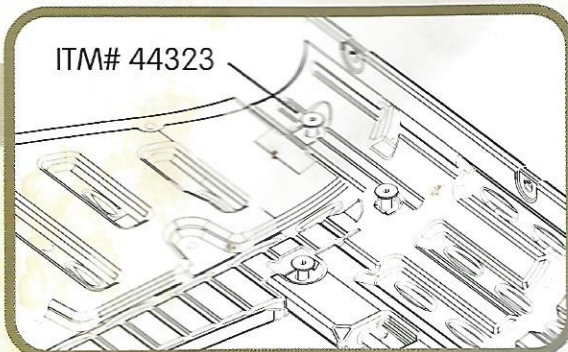

Step 7

Figure 7


Insert Front Assembly into Main Floor slots.
(Figure 7)

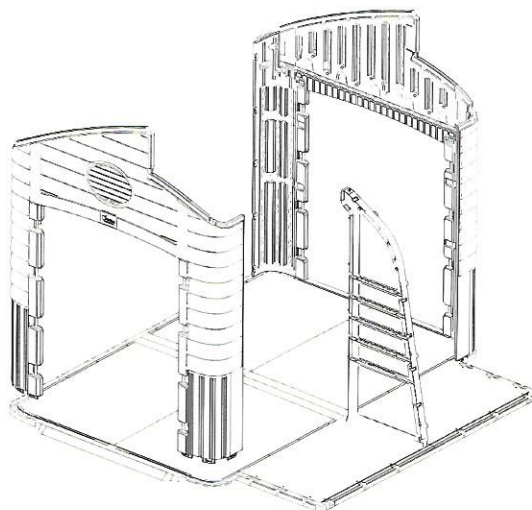

Step 8

Figure 8

Secure Front Assembly to Main floor with
Floor Locking Wedges (44322). 3 on the
Left Corner Post and 3 on the Right Corner
Post. (Figure 8)

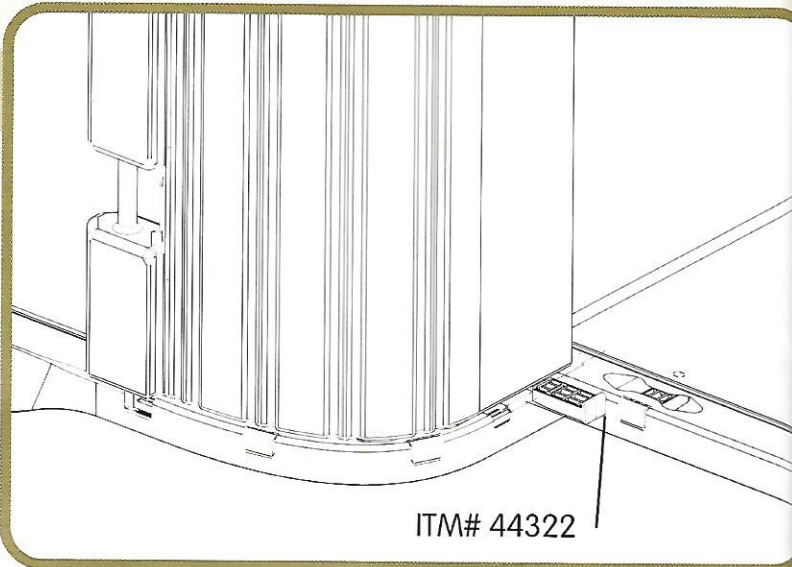


Step 9

Repeat steps 7 & 8 to secure Rear
Assembly to the Main Floors.

Step 10

Insert Front Greenhouse End Panel (44111) into Greenhouse Floor Slots. Secure to floor with 3 Floor Locking Wedges, (Figure 9) and secure End Panel to the Corner Post with 6 EasyBolts. (Figure 10)


Figure 9

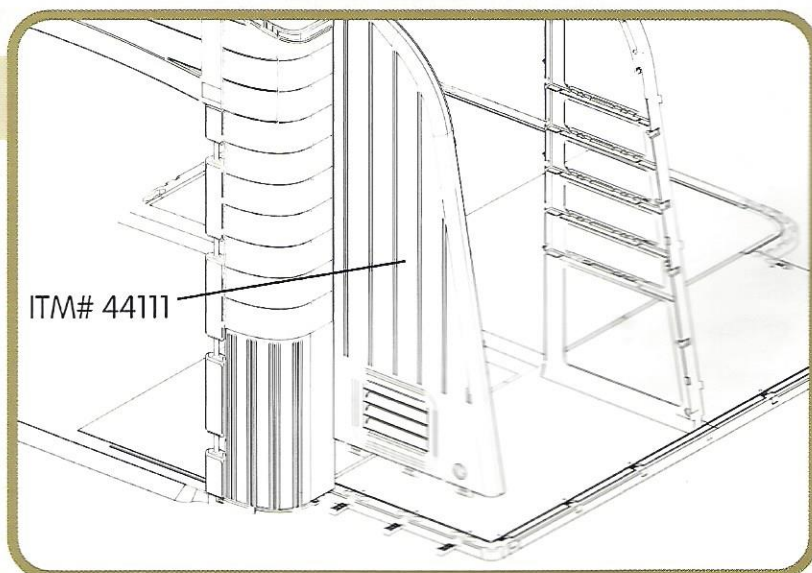

Step 11

Repeat Step 10 with Rear Greenhouse End Panel. (44112)


Figure 10

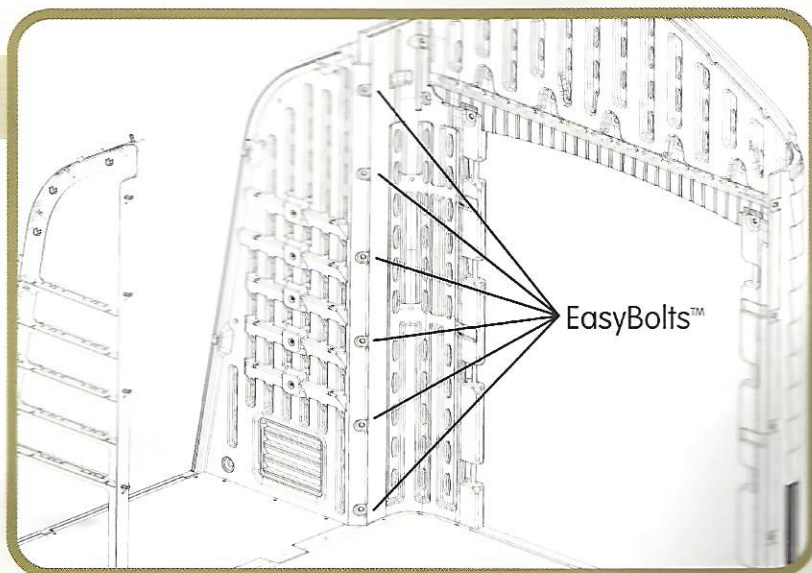

Step 12

OPTIONAL – To allow access for a hose into the Greenhouse, use a utility knife to cut around the inside hole in the Greenhouse End Panels. Insert Hose Cap (44319C) and feed hose through. (Figure 10A)

Figure 10A

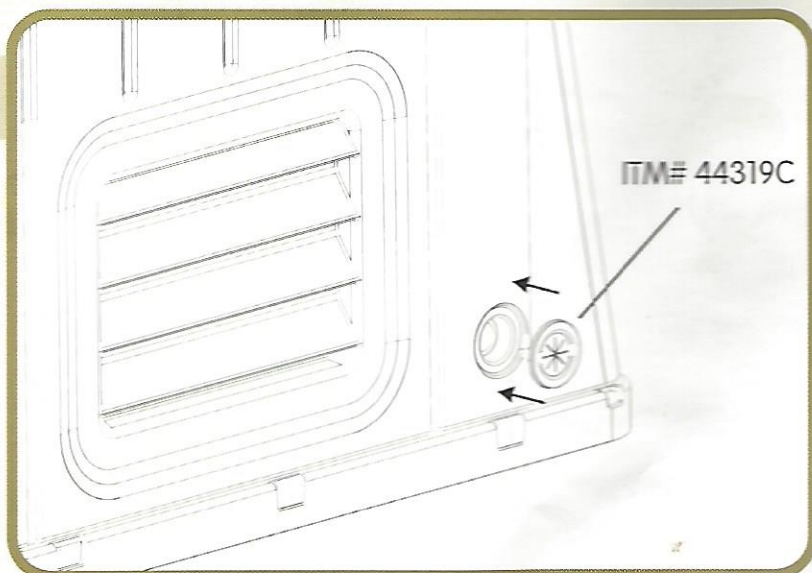

Step 13

Attach Inner Brace (44313A) to Mid Brace, be sure Inner Brace fits over peg on Mid Brace. (Figure 11 & 12) Secure Inner Brace to Greenhouse Floor assembly with Floor Locking Wedge. (Figure 13)

Figure 11

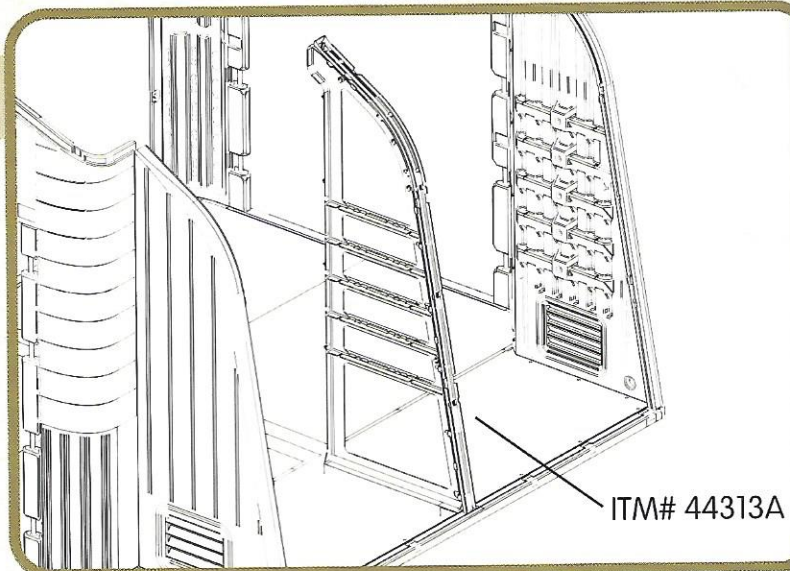


Figure 12


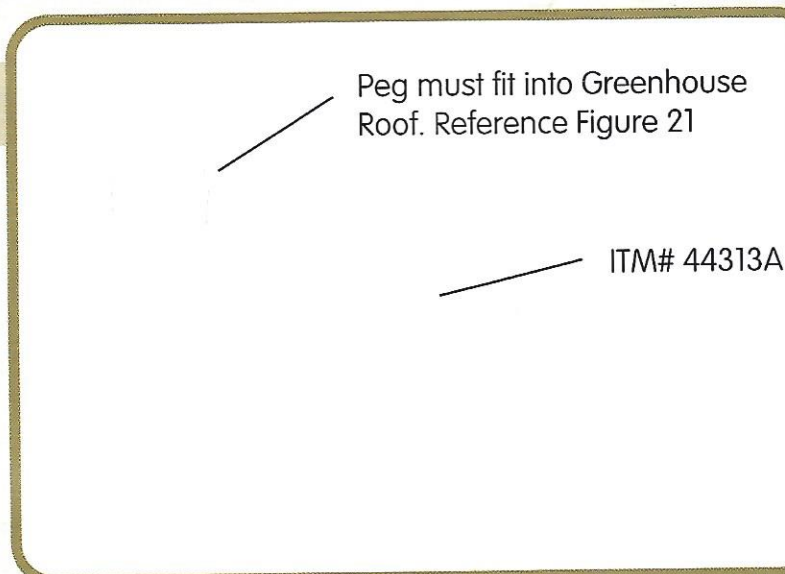



Figure 13

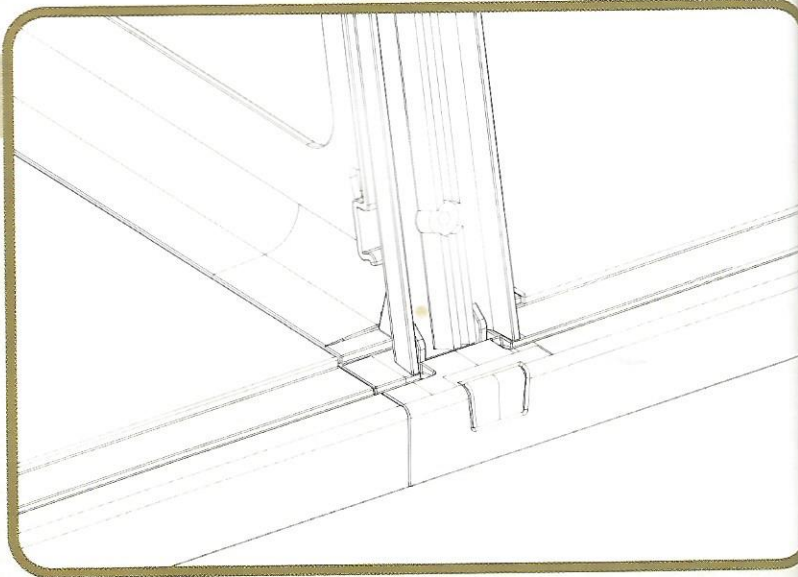

Step 14

Fold flaps on Soil Hopper Rear (44123) inward and secure to the Soil Hopper Front (44118) using 4 EasyBolts™. (Figure 14)


Figure 14

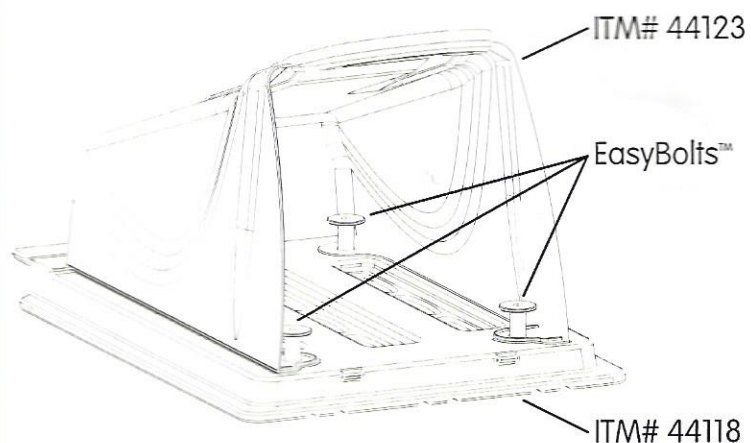

Step 15

Secure Soil Hopper Assembly to the Left Side Panel (with Soil Hopper) - (44115) using 2 EasyBolts™. (Figure 15)

Figure 15

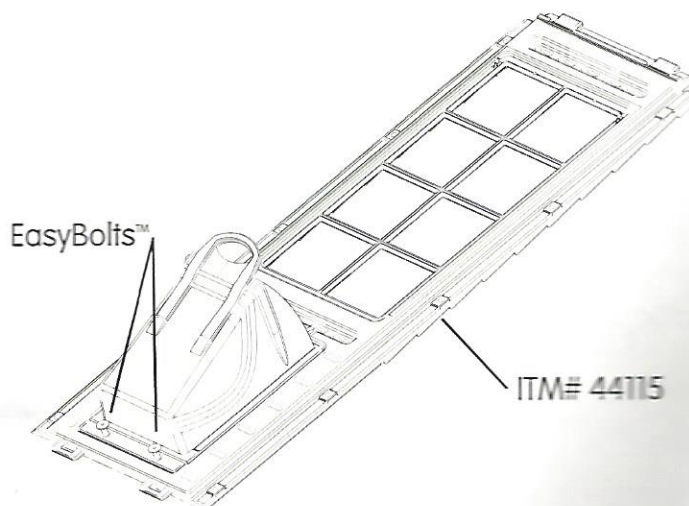

Step 16

Insert the Left Side Panel (with Soil Hopper) - (44115) into Main Assembly. (Figure 16)
Secure Panel to Main Floor with the Floor Locking Wedge and Secure Panel to the Corner Post with 5 EasyBolts™.

Figure 16




Step 17

Figure 17

Insert Left Side End Panel (44116) into Main Assembly. (Figure 17) Secure Panel to Main Floor with the Floor Locking Wedge and Secure Panel to the Corner Post with 5 EasyBolts™.

ITM# 44116

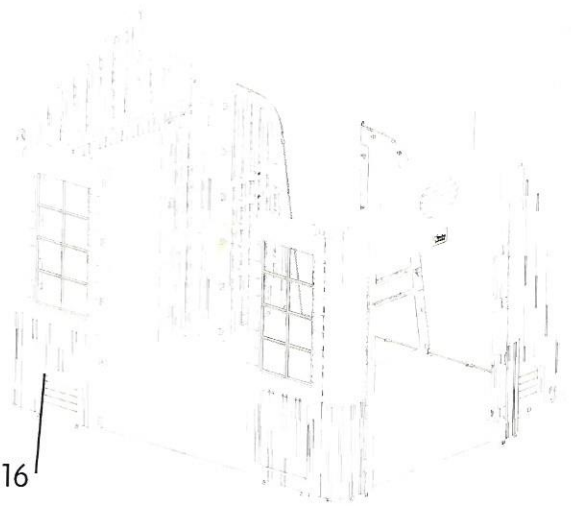

Step 18

Figure 18

Insert Left Side Center Panels (2) – (44117) into assembly. (Figure 18) Secure Panels to Main Floor with the Floor Locking Wedges and Secure Panels to the mating panels with 5 EasyBolts™ each.


ITM# 44117



Step 19

Figure 19

Assemble EasyNuts™ by placing part 1A and part 1B together. (Figure 19)

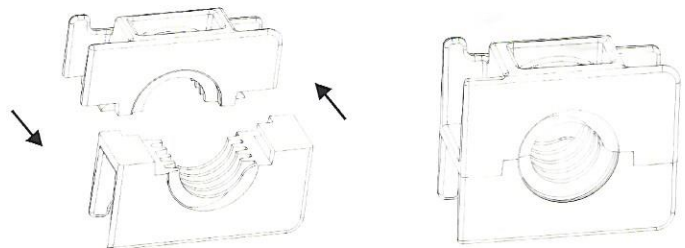

Step 20

NOTE: THREE PEOPLE WILL BE REQUIRED FOR THE ASSEMBLY OF THE ROOF PANELS.

Place Rear Greenhouse Roof (44307) and Front Greenhouse Roof (44306) on the ground with the ribbed side up, and the channeled ends facing each other.

(Figure 20) Connect the Roofs by inserting the end ribs of the Rear Roof into the end channels of the Front Roof and secure together with 4 EasyBolts™ and 4 EasyNuts™. (Figure 21, 21a)

Figure 20

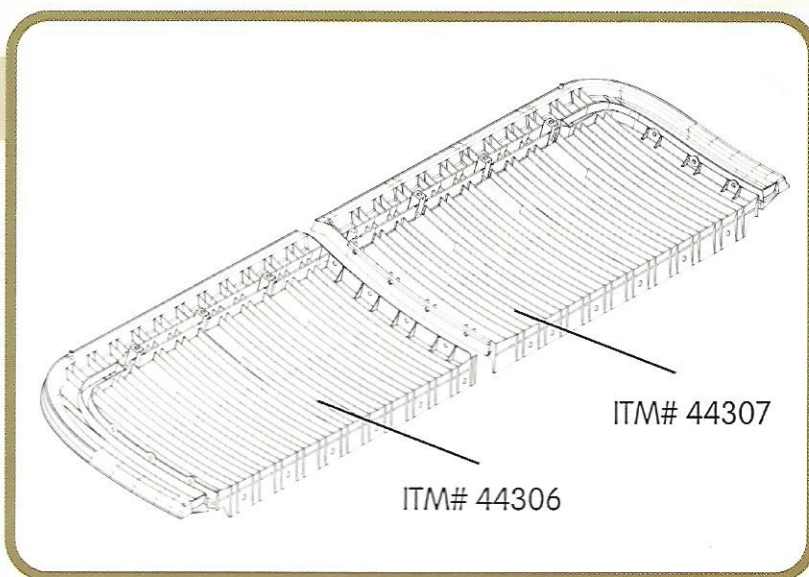


Figure 21


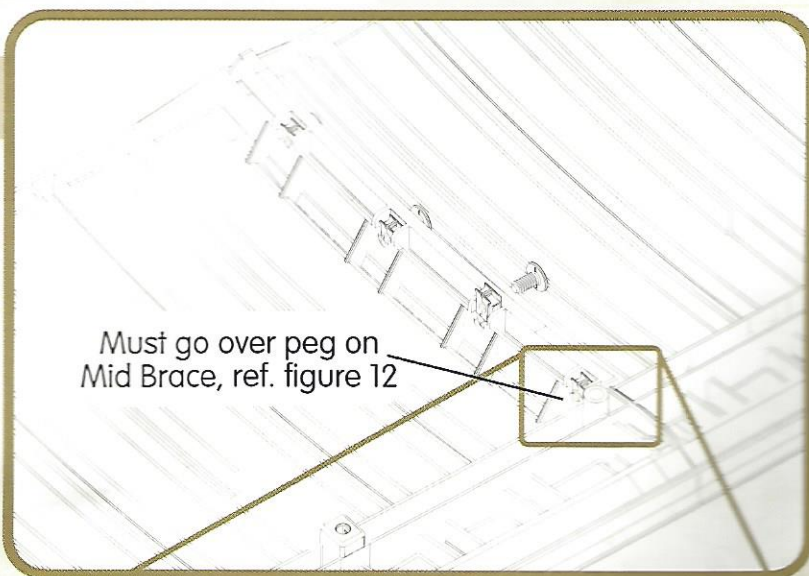


Figure 21a

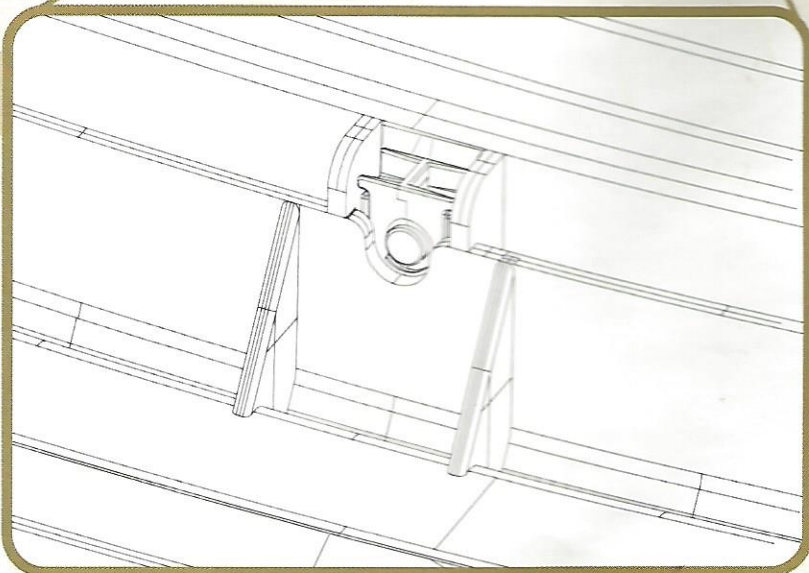

Step 21

Lift Greenhouse Roof assembly into place on top of the Corner Posts and Upper Panels, making sure the peg on the Mid Brace fits into the hole on the Roofs.

(Figure 22) Secure ends of Front and Rear Roofs to Front and Rear Upper Panels respectively with 3 EasyBolts™ on each end. (Figure 23)

Figure 22


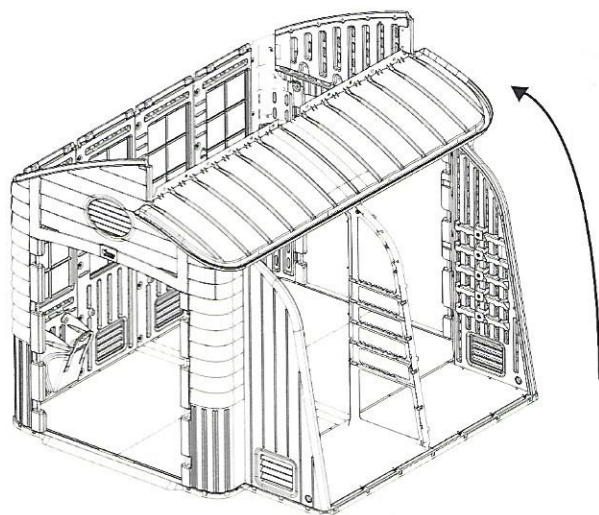



Figure 23

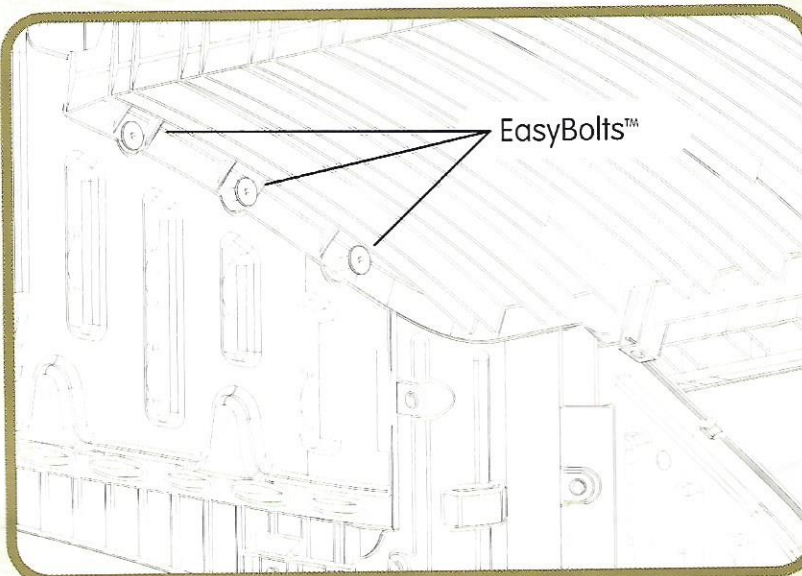

Step 22

Insert 24 EasyNuts™ into slots in I-beam assembly. (Figure 24)


Figure 24

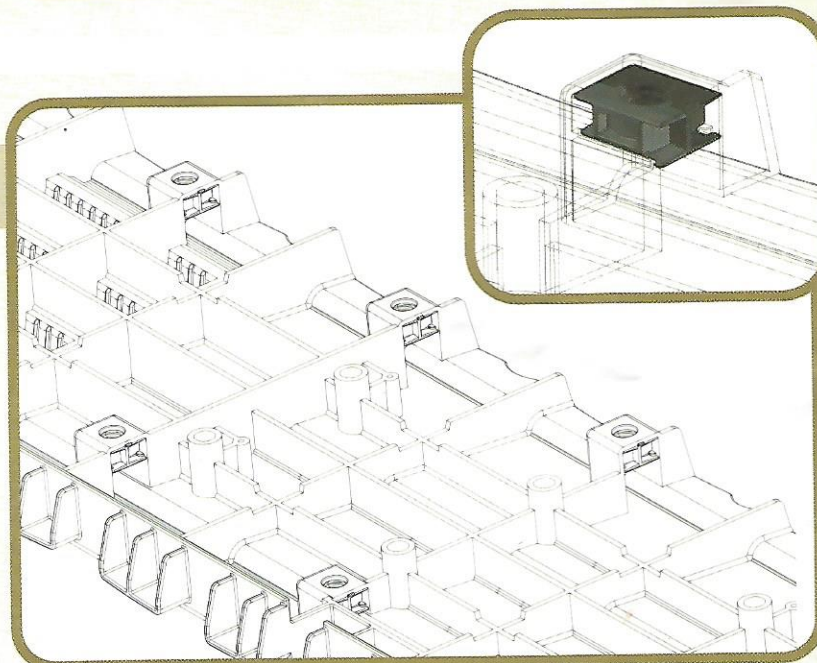


Step 23

Figure 25

Place Front and Rear I-Beam Supports (44122A, 44122B) together and secure with 1 EasyBolt™ and 4 – 1/4" x 1.50" self tapping screws (HW182). (Figure 25)

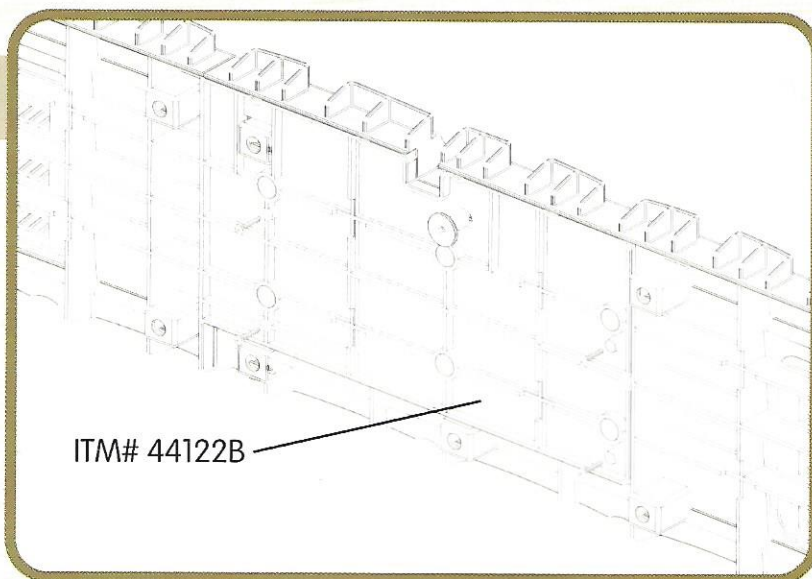


I-Beam Assembly

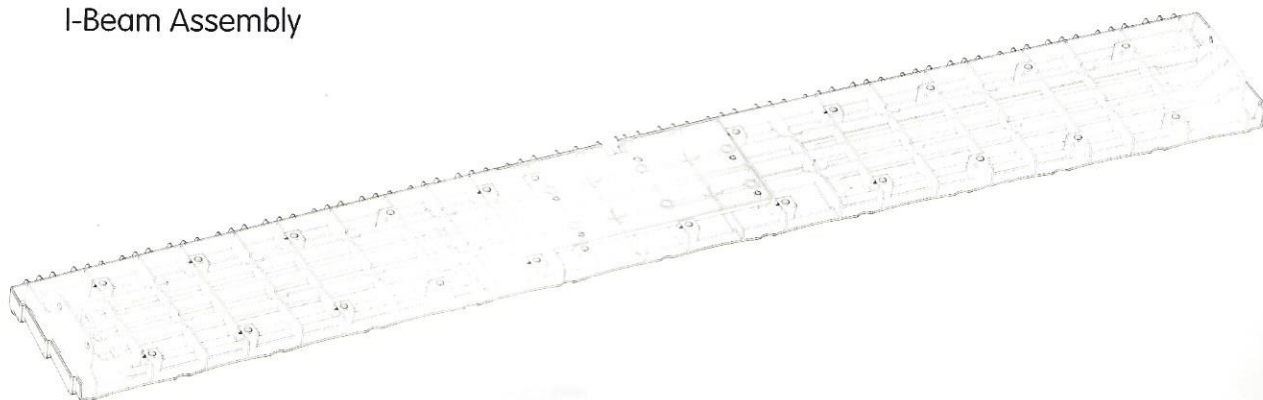

Step 24

Figure 26


Place assembled I-Beam onto Greenhouse Roofs and Upper Panels .
(Figure 26)

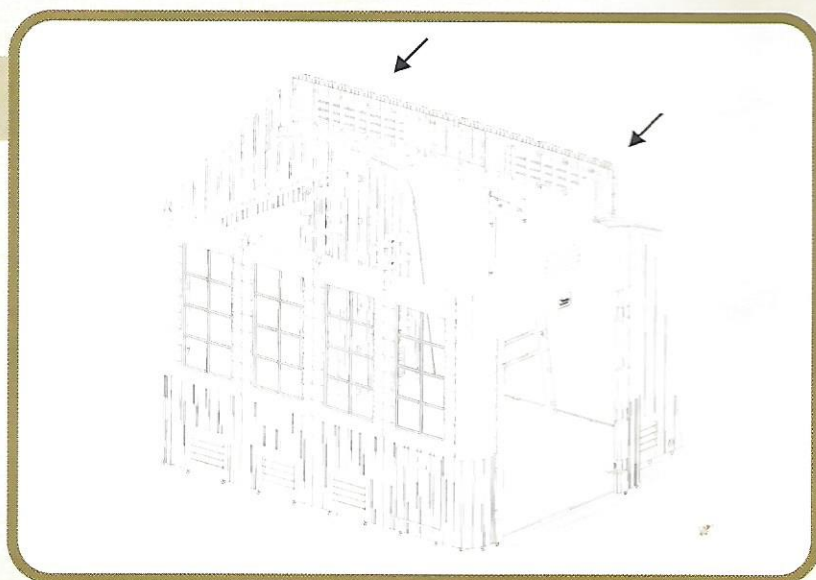

Step 25

Secure I-Beam to Upper Panels with 2 EasyBolts™ per end. (Figure 27)


Figure 27

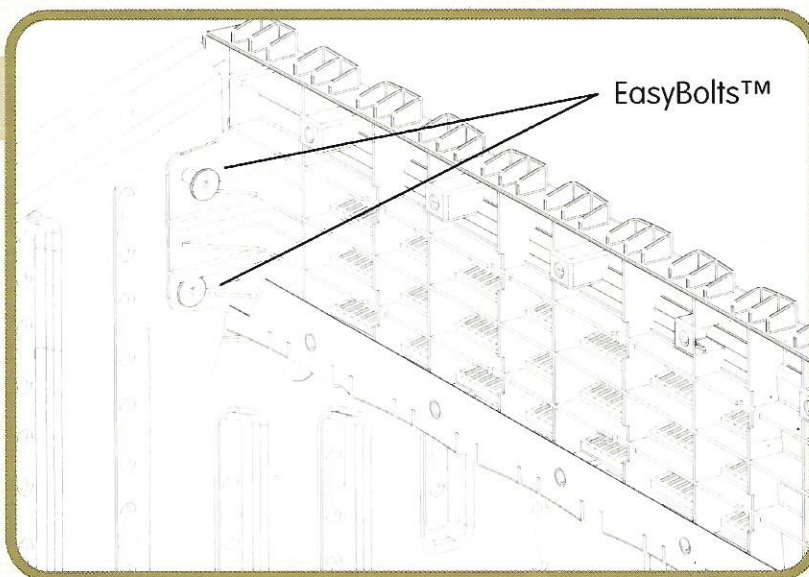

Step 26

Secure I-Beam to Greenhouse Roofs with 12 EasyBolts™. (Figure 28)


Figure 28

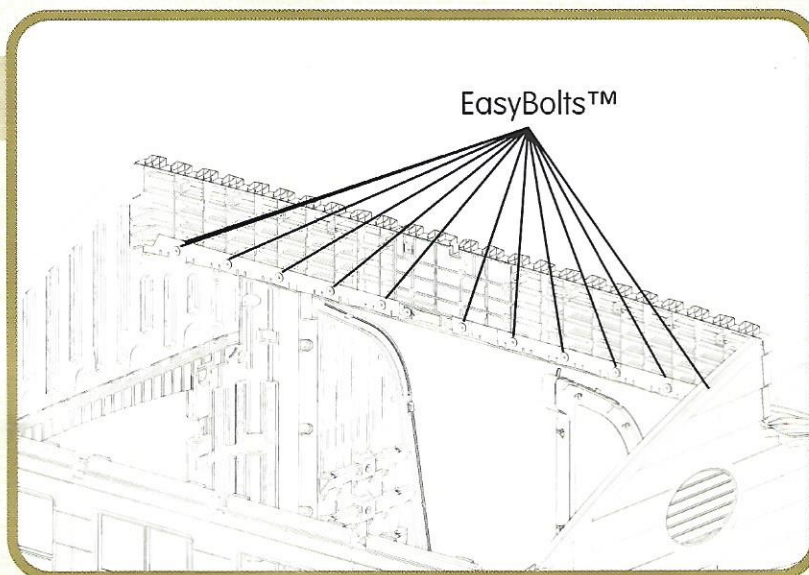

Step 27

Mount Rear Main Roof Panel (44305) (Figure 29)


Figure 29

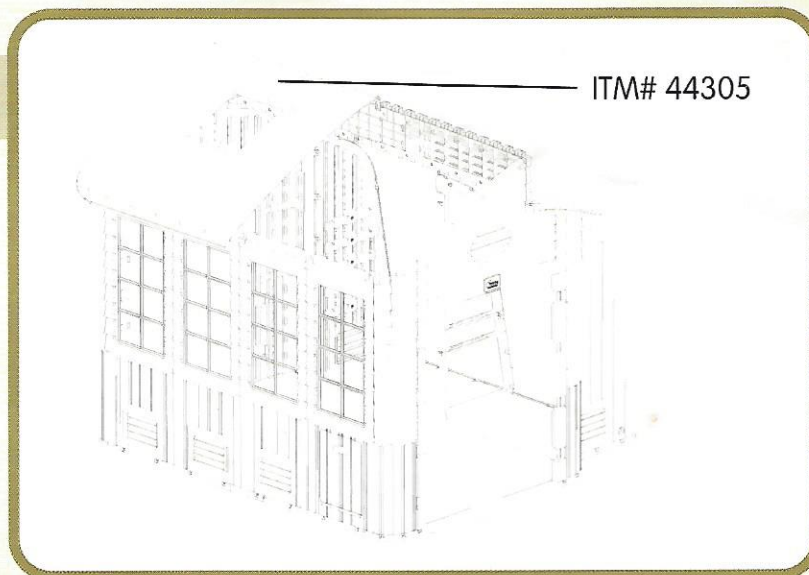

Step 28

Mount Front Main Roof Panel (44304)
(Figure 30)


Figure 30

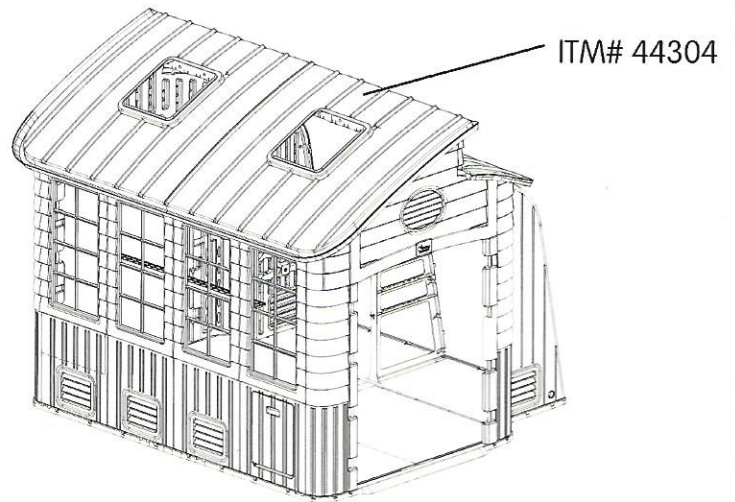

Step 29

Secure Main Roof Assembly to Upper
Panels with 3 EasyBolts™ on each end.
(Figure 31)

Figure 31

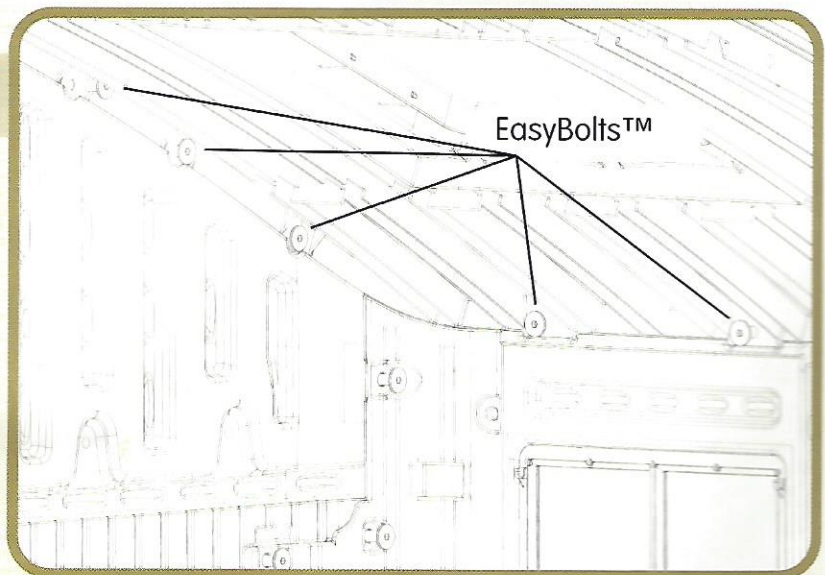


Step 30

Secure Main Roof Assembly to Left Side
Assembly with 8 EasyBolts™. (Figure 31)

Step 31

Secure Main Roof Assembly to I-Beam
Assembly with 12 EasyBolts™. (Figure 32)

Figure 32

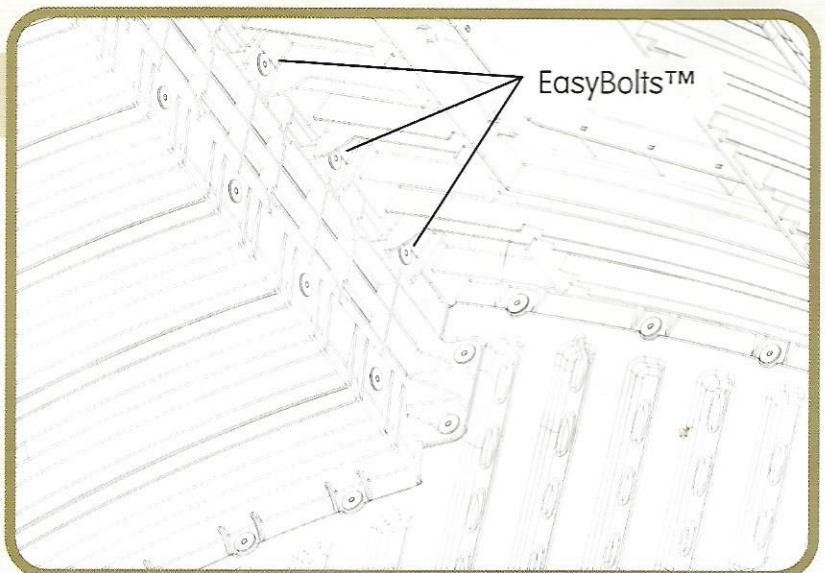

Step 32

Secure Main Roof panels to each other with 5 EasyBolts™ and EasyNuts™. (Figure 33)

Figure 33



Step 33

From the inside of the Greenhouse, rotate the Skylight (44316) so it can pass through the Roof opening. Once it is on top of the Roof, pull down until flanges snap into place. (Figure 34)

Figure 34




Step 34

Working from the inside of the Greenhouse Assembly, first insert EasyNuts™ (6) into areas provided on the Greenhouse Roofs. (Figure 35)

Next insert Inner Braces (6)- (44313A) into Greenhouse Floors and join with Greenhouse Roofs. (Figure 35 & 36)


Figure 35

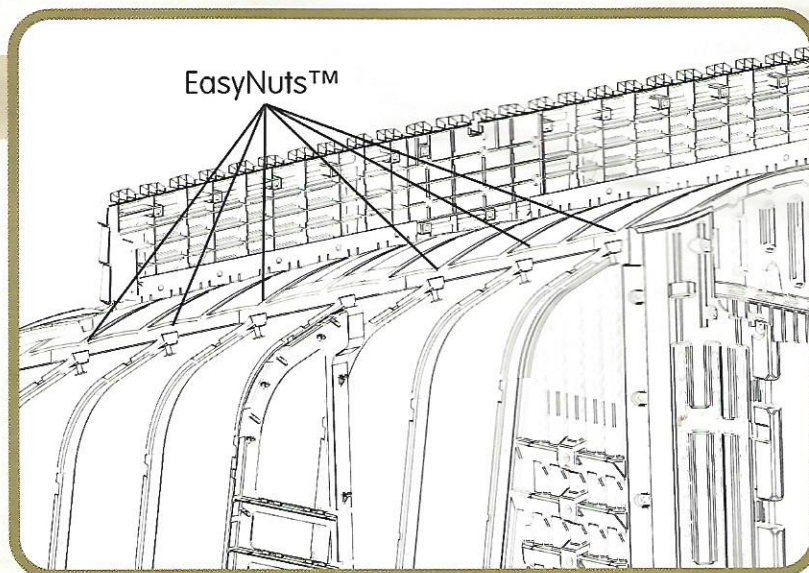

Step 35

Secure each Inner Brace to Greenhouse Roof with an EasyBolt™ (Figure 35) and secure each Brace to the Floors with the Floor Wedges. (Figure 36)



Figure 36

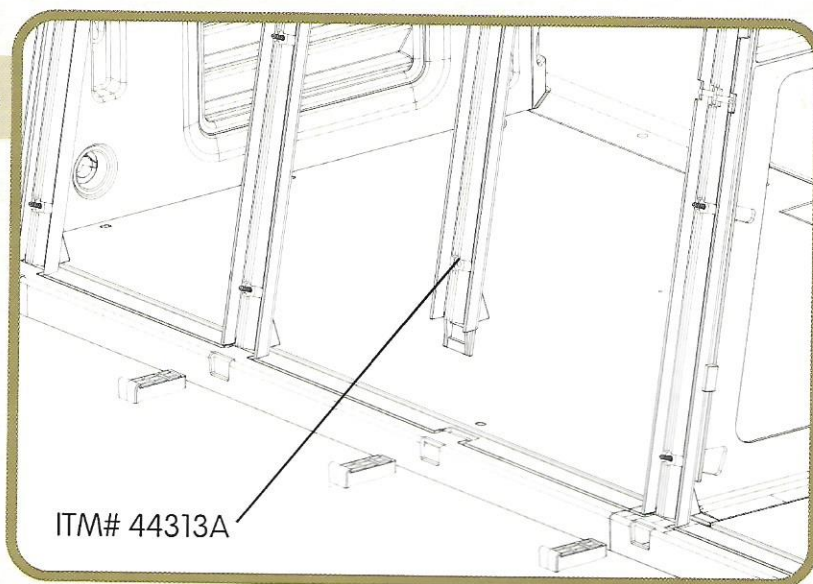

Step 36

Fasten the Inner Brace (44313A) to the Front Greenhouse End Panel (44111) with five (5) – 1/4" x 1.50" self tapping screws (HW 182). (Figure 36a)

Figure 36a
Figure 36b

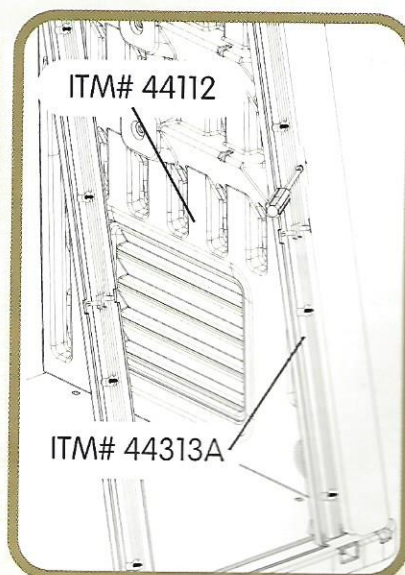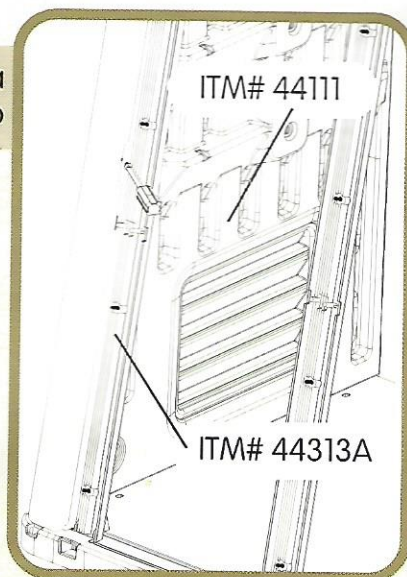


Repeat Step 36 with Inner Brace (44313A) and the Rear Greenhouse End Panel (44112). (Figure 36b)

Step 37

Figure 37


Insert Flat Window Panes (44320) between each Brace, (keeping the part engraving legible from inside the Greenhouse). (Figure 37)

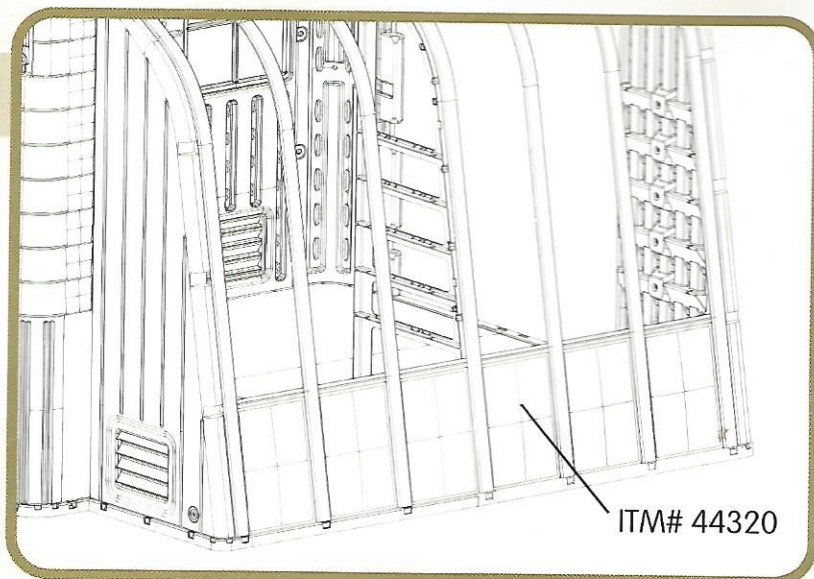

Step 38

Keeping the engraving "THIS SIDE UP" facing the inside of the Greenhouse, place a Cross Brace (6)- (44313C) on top of each pane in between Vertical Braces and insert the matching peg from the Vertical Brace into the matching hole on Cross Brace. (Figure 37 & 37A)


Figure 37a

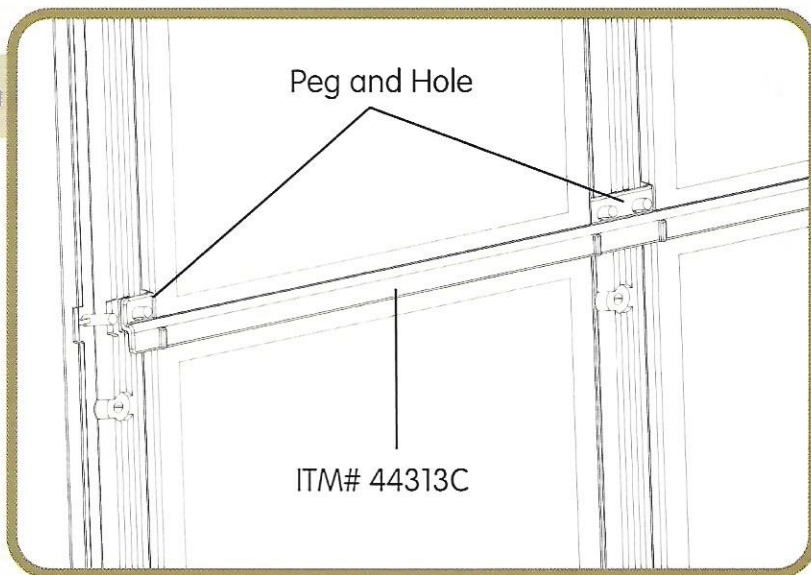

Step 39

Repeat Steps 37 & 38 for the next 2 rows of Windows. (Figures 38, 39, & 40)

Figure 38

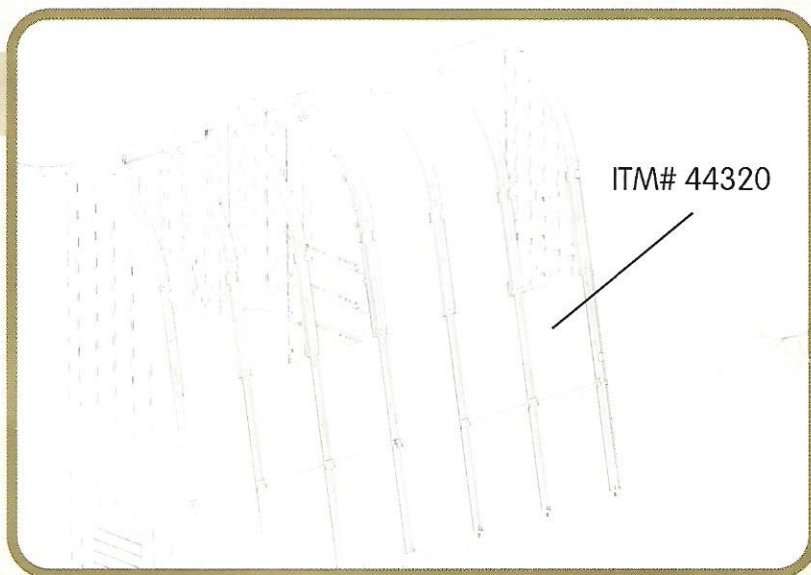

CAUTION: USE ONLY SOFT COTTON TOWELS TO CLEAN THE GREENHOUSE WINDOWS. PAPER TOWELS OR OTHER ROUGH MATERIALS MAY PERMANENTLY SCRATCH THE WINDOW SURFACE.

Figure 39


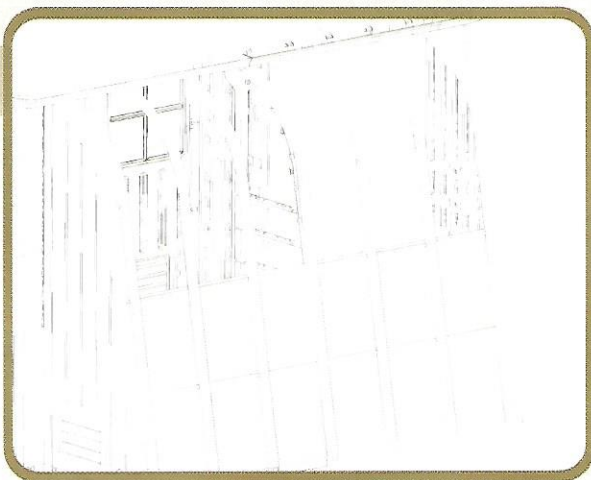



Figure 40

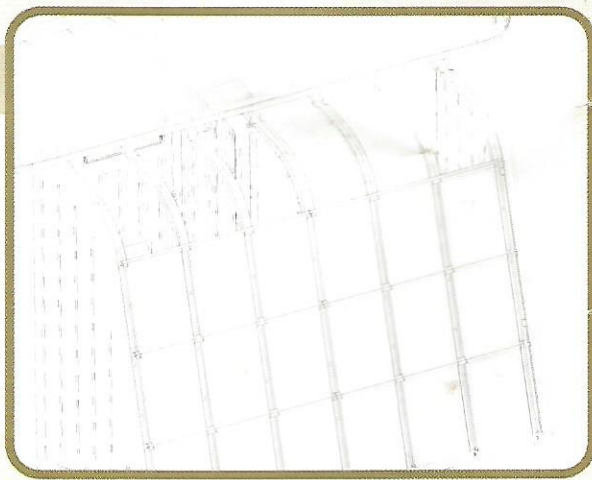

Step 40

Set Arc Window Panes (6)- (44321) into place. (Figure 41)


Figure 41

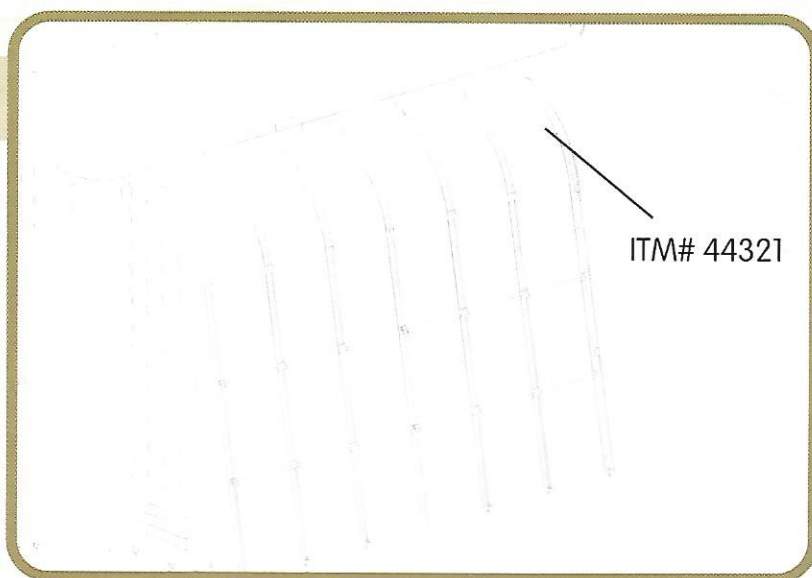

Step 41

Set Outer Braces (7)- (44313B) into position in line with the Inner Braces. (Figure 42)

Figure 42

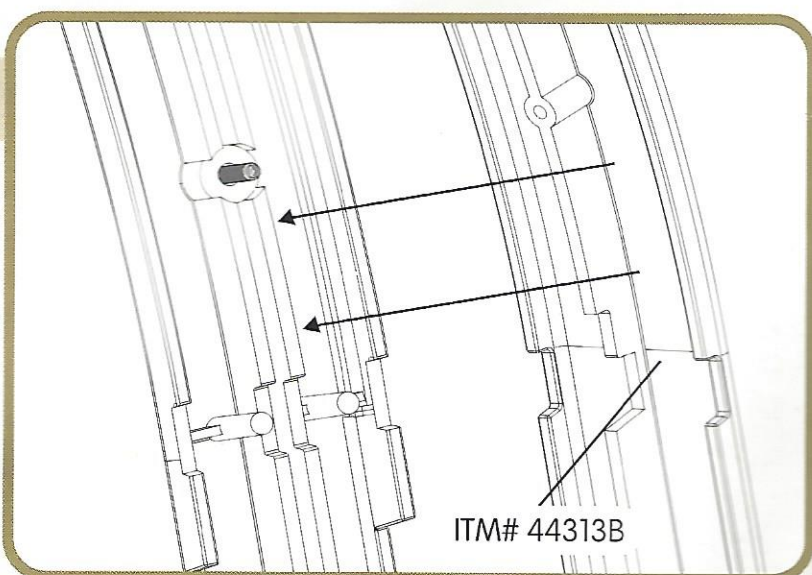


Step 42

When placing the Outer Braces over the Inner Braces, ensure that the rib on the Outer Brace fits inside the entire groove on the Inner Brace. (Figure 42)

NOTE: A SMALL BEAD OF SILICONE MAY BE APPLIED IN-BETWEEN THE GREENHOUSE END PANELS AND THE OUTER BRACES TO ENSURE A WATER TIGHT SEAL.

Figure 43

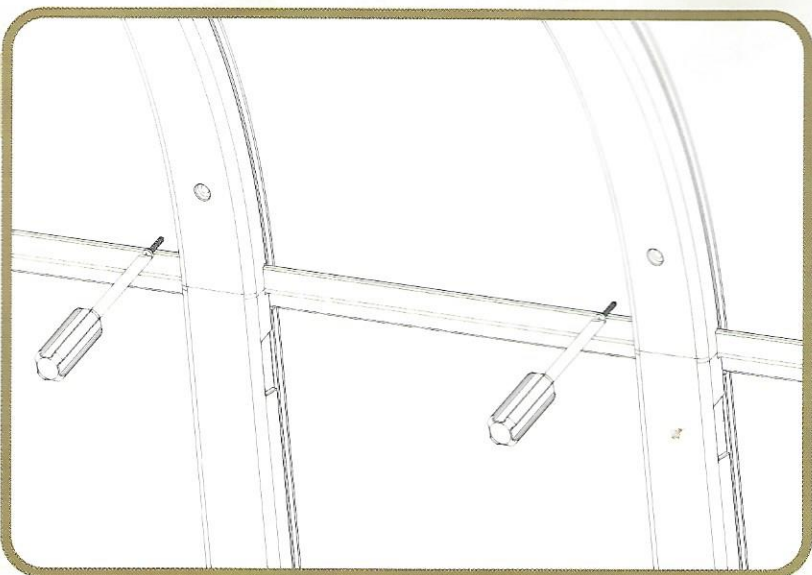


Step 43

From inside the Greenhouse, fasten Inner and Outer Braces with 1/4" x 1.50" self tapping screws (HW182). (8 screws per Brace) (Figure 43)

Step 44

Assemble the Inner and Outer Door Handles (44119A, 44119B, 44119C) using 1/4" x 3/4" self-tapping screws (HW181). (Figures 44 & 45)

Figure 44
Figure 45

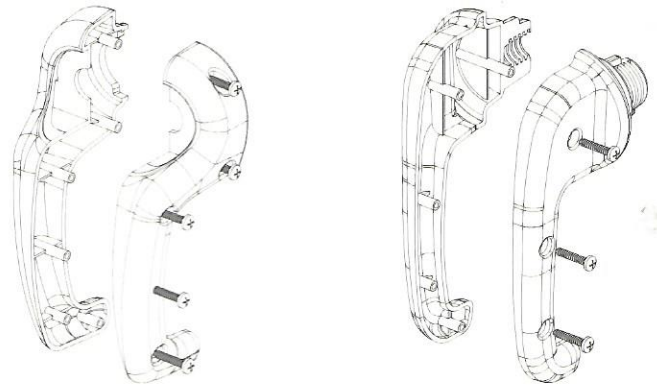


Inner Door Handles
ITM# 44119A

Outer Door Handles (LH or RH)
ITM# 44119B or ITM #44119C

Step 45

Secure the assembled Inner and LH Outer Door Handle to the Front and Rear LH Upper Doors with one EasyBolt™. (Figure 46) Secure the assembled Inner and RH Outer Door Handle to the Front and Rear RH Doors with one EasyBolt™.


Figure 46

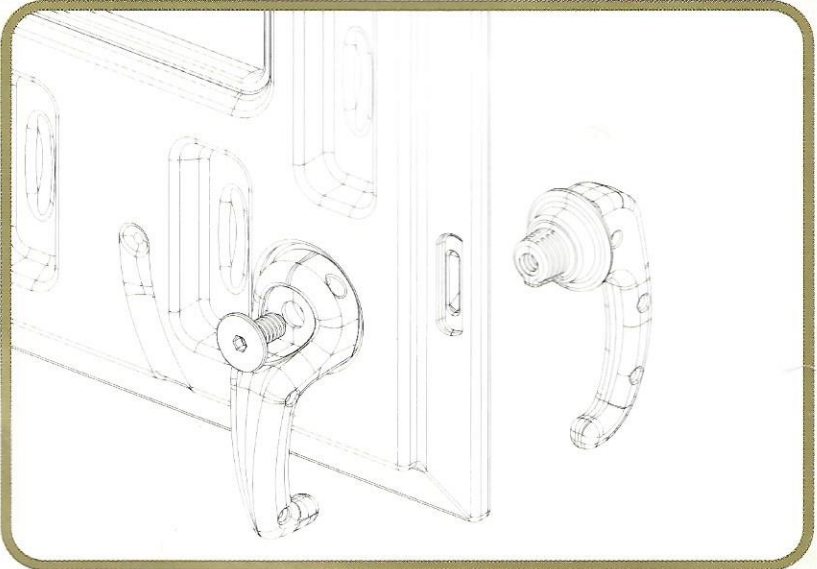

Step 46

Place the Front RH Upper Door (44106) into position aligning the hinges of the door with the hinges of the RH Corner Post. (Figure 47)


Figure 47

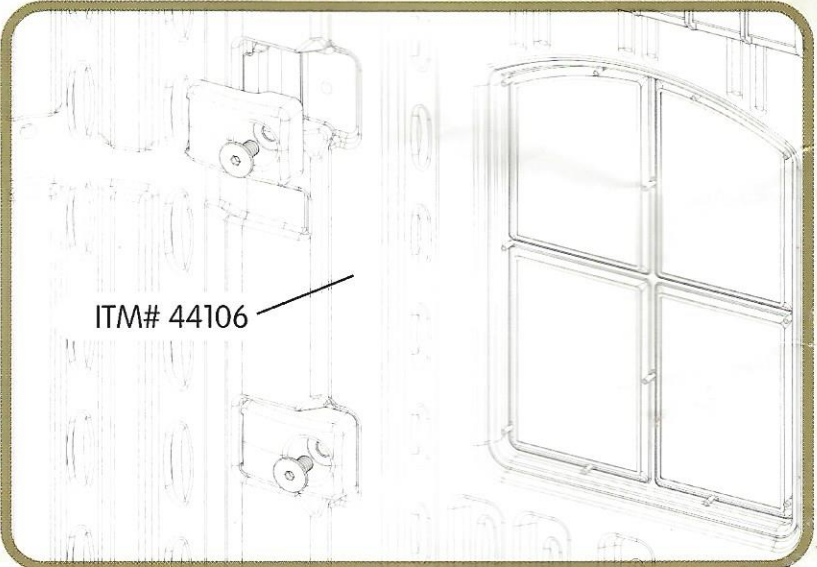

Step 47

Place Inside Hinge Cover (44319A) into position over the hinge. The hinge on the Door will fit into the slot on the Hinge Cover. Secure with an EasyBolt™. (Figures 47 & 48)

Figure 48

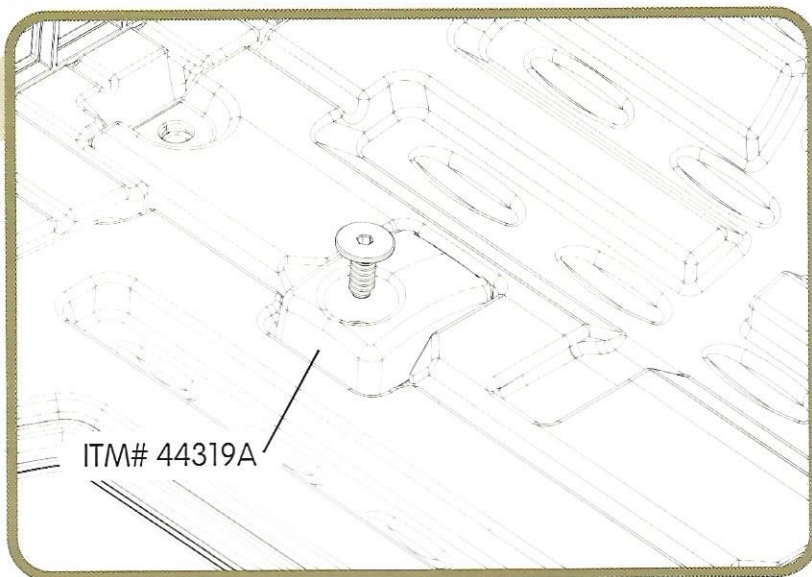

Step 48

Repeat steps 46 & 47 on all Upper and Lower Doors.

Step 49

The Door Locking Assembly can be installed by inserting the Hasp Body (44030A) from the back side of the Upper Left Door. Secure by sliding the Hasp Clip (44030B) from the front over the Hasp Body until it clicks into place and is tight. (Figure 49). The doors can be held shut when all doors are closed by inserting a lock (lock not provided) through the hole in the Hasp Body. A Cotter Pin (44030C) is provided if you do not wish to use a lock. (Figure 50) This is to be done to the Front and Rear Doors.

Figure 49


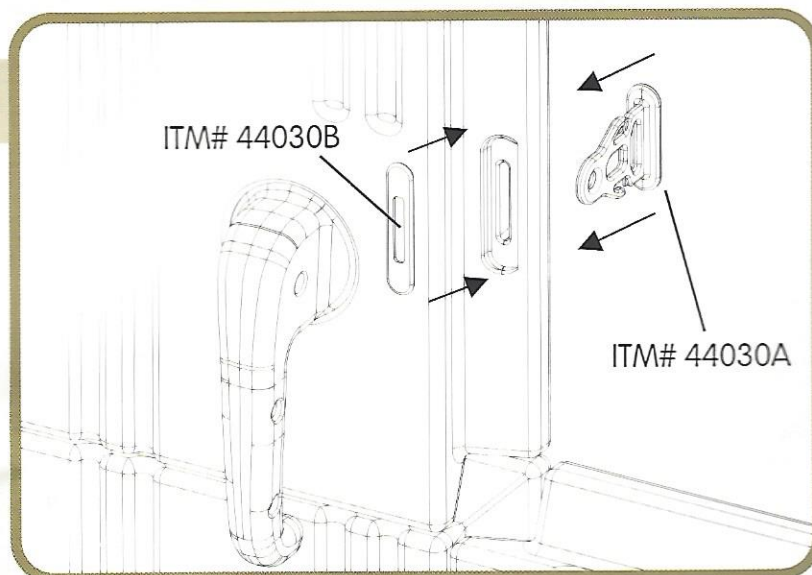



Figure 50

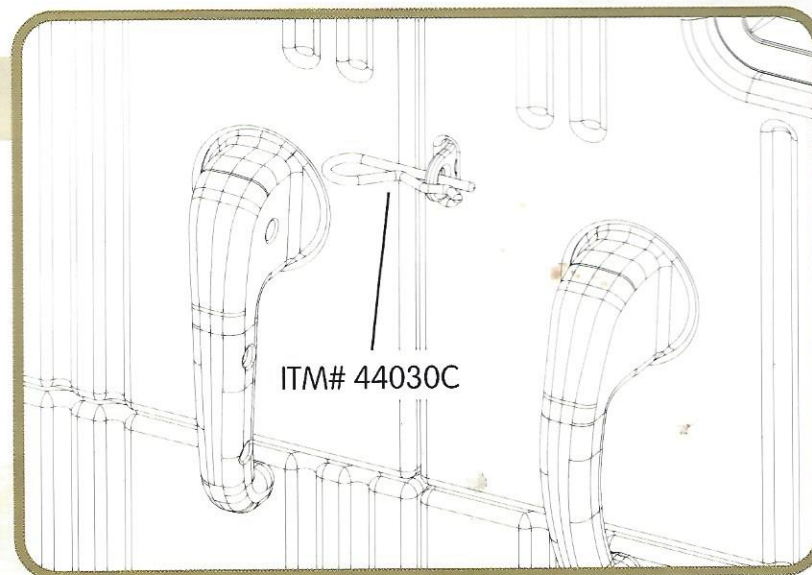

Step 50

Attach RH Corner Post Shelf (44310B) at the desired height to either the Front RH Corner Post or Rear LH Corner Post. Secure with an EasyBolt™. Repeat with LH Corner Post Shelf on either the Front LH Corner Post or Rear RH Corner Post (Figure 51)


Figure 51

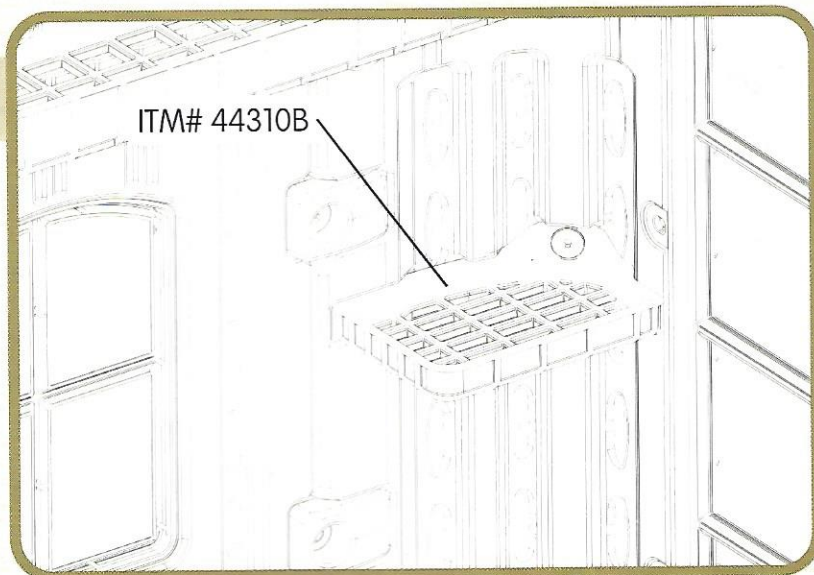

Step 51

Attach the Door Latch (44319B) to the Front and Back RH Lower Doors (44108) with 1 EasyBolt™. (Figure 52)


Figure 52

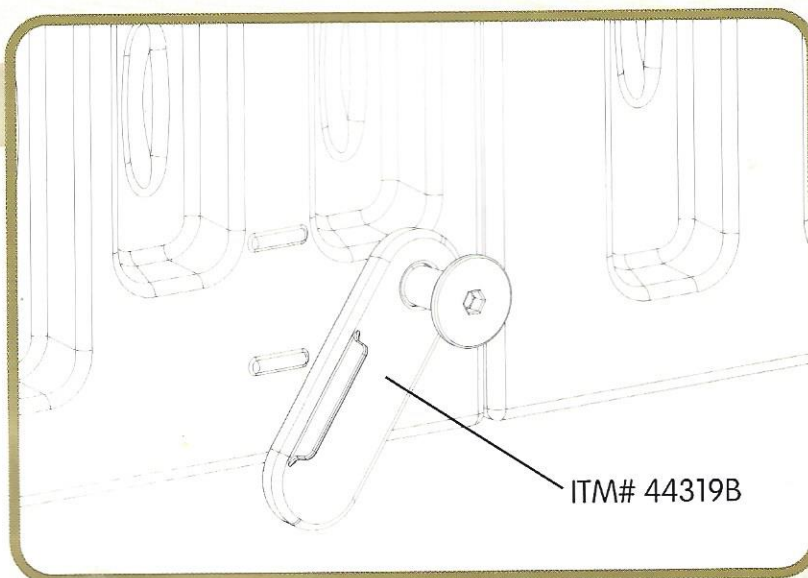

Step 52

Secure Left Side Window Shelf (44311) to the Left Side Assembly with 3 EasyBolts™. (Figure 53)


Figure 53

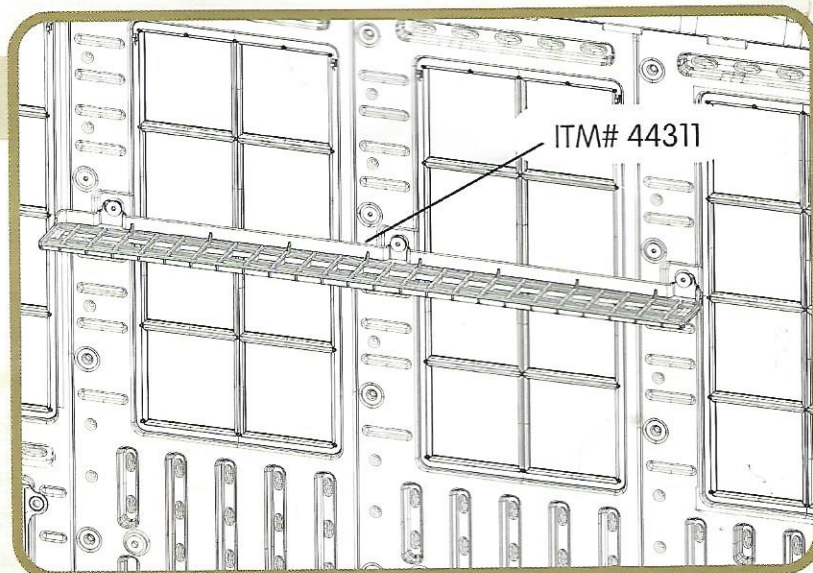

Step 53

Figure 54

To install the Greenhouse Shelf Braces (44126) position the Brace on top of the Greenhouse Floors aligning the clearance holes on the Brace over the screw holes on the Floors. Fasten the Braces to the Floors with 2 – 1/4" x 1.50" self tapping screws (HW182). (Figure 54)

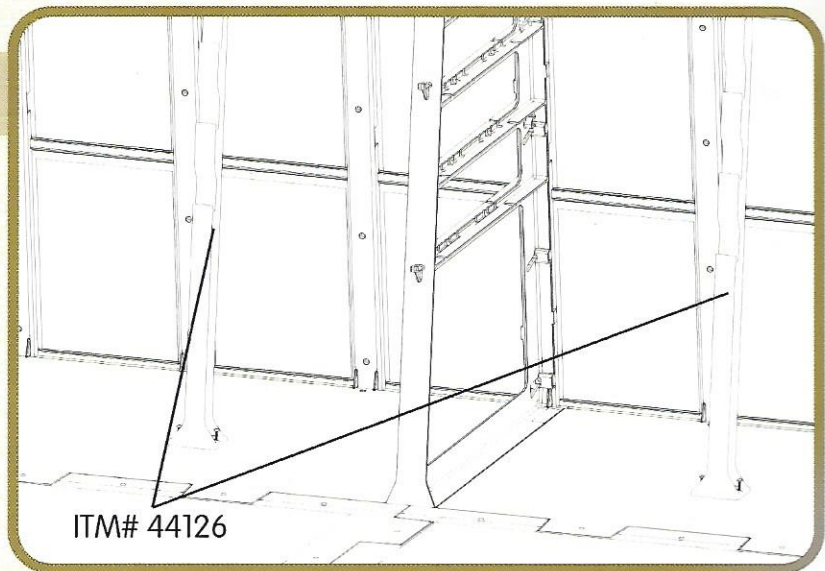

Step 54

Figure 55

To install the Greenhouse Shelf (44309) put the end with the low hanging rib onto the desired ledge of the Greenhouse End Panel and secure it with an EasyBolt™ (Figure 55). Then take the opposite end with the 2 attachment flanges and insert them over the appropriate standing ribs. (Figure 56)


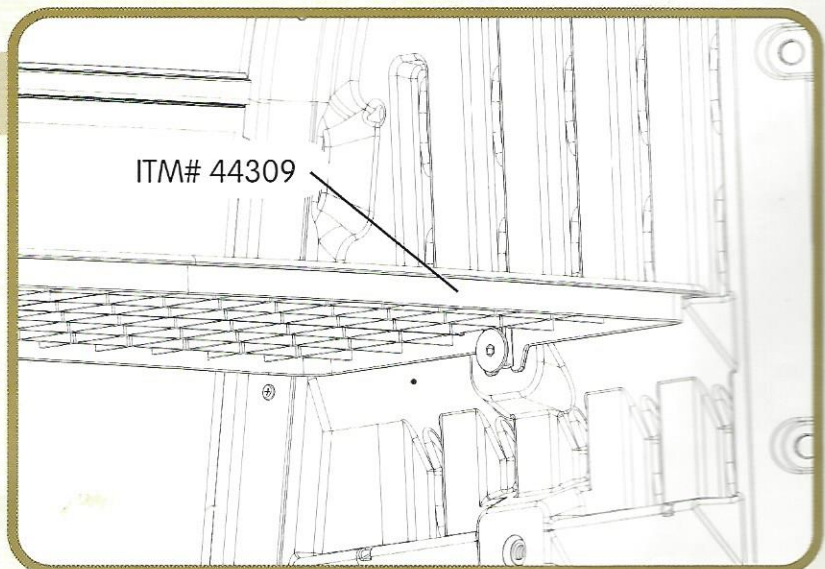


Figure 56

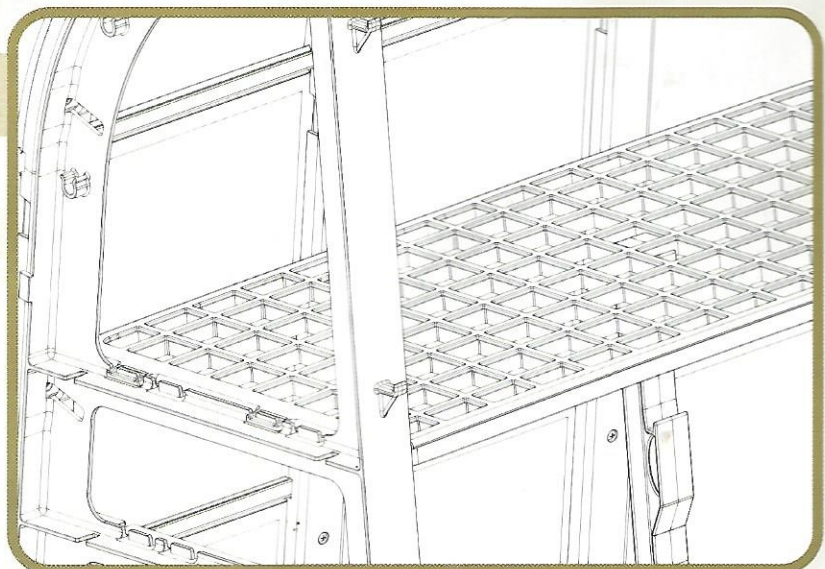


Step 55

Figure 57

The Upper Shelves (44312) can be installed by securing them to the Front and Rear Upper Panels with 5 EasyBolts™.


(Figure 57)

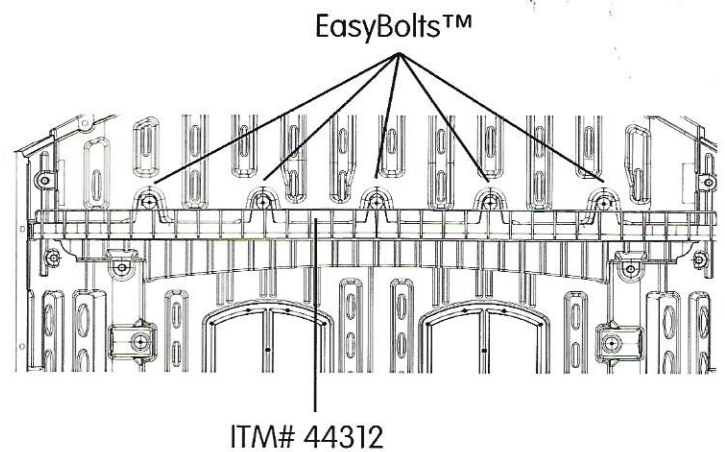

Step 56

Figure 58

Attach Potting Table Leg Supports (44114) to the Potting Table Legs (44113). Note the orientation of the Supports. (Figure 58)

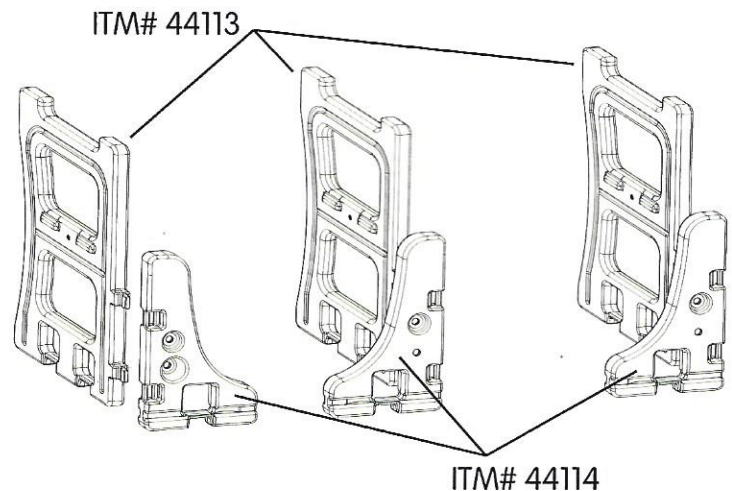

Step 57

Figure 61

Assemble EasyNuts™ and insert into slots on the bottom of the Potting Table Top (9 places) (Figures 59, 60, & 61)

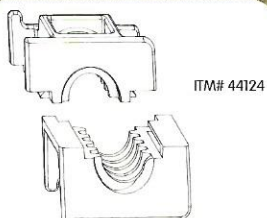


Figure 59


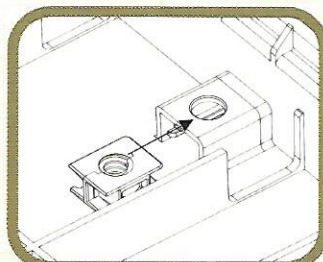



Figure 60

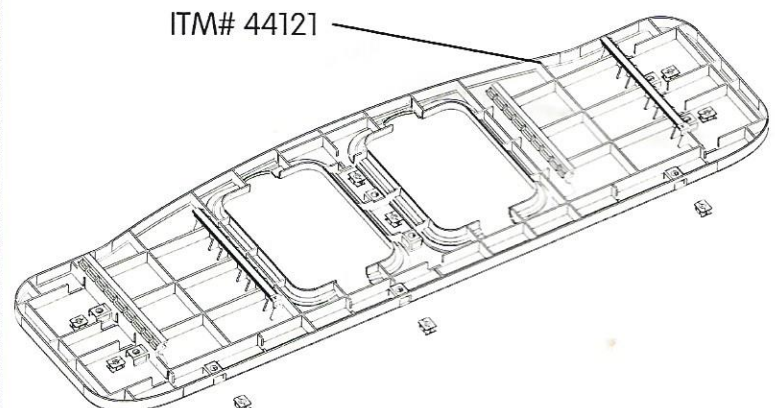

Step 58

Lower Table Leg/Leg Support assemblies onto Table Top (44121) aligning the EasyBolt™ holes in the Table Legs with the EasyNut™ holes in the Table Top. (Figure 62)

Figure 62

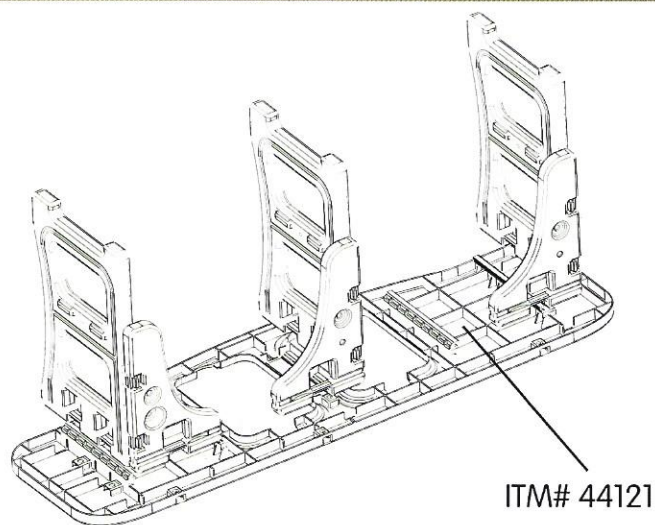


Step 59

Secure Table Leg/Leg Support assemblies to the Table Top with EasyBolts™ (3 bolts per leg assembly) (Figure 62)

Step 60

Your Potting Table can now be flipped over onto its legs. Place Potting Table Shelves (44315) into position below the Table Top. (Figure 63)


Figure 63

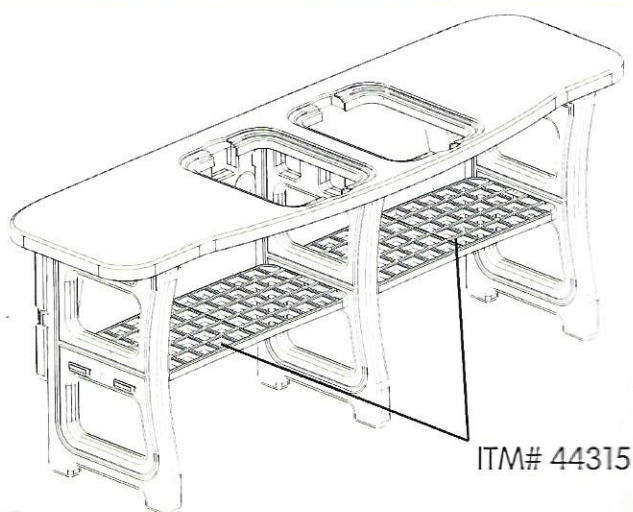

Step 61

Secure Shelves to assembly using 4 EasyBolts™. (Figure 64)

Figure 64

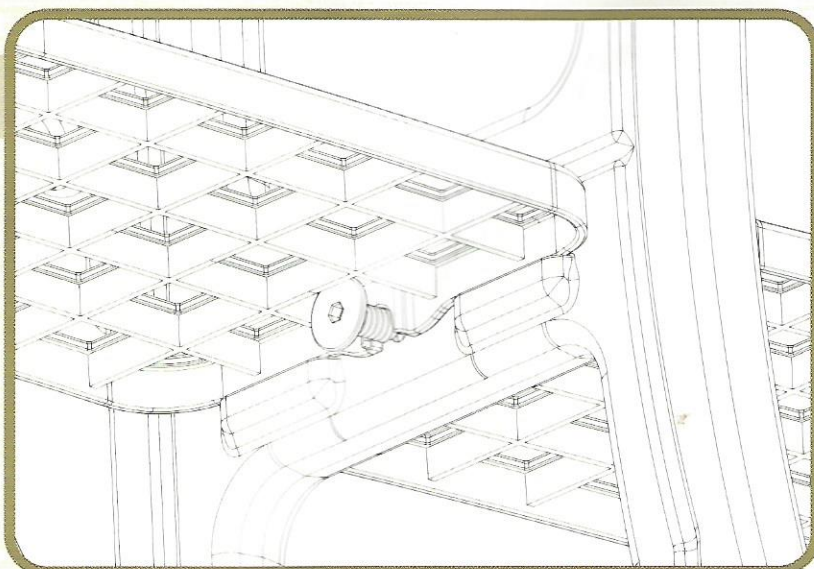


Step 62

Figure 65

Place 2 Tubs (44324) into top of the Table.
(Figure 65)

ITM# 44324

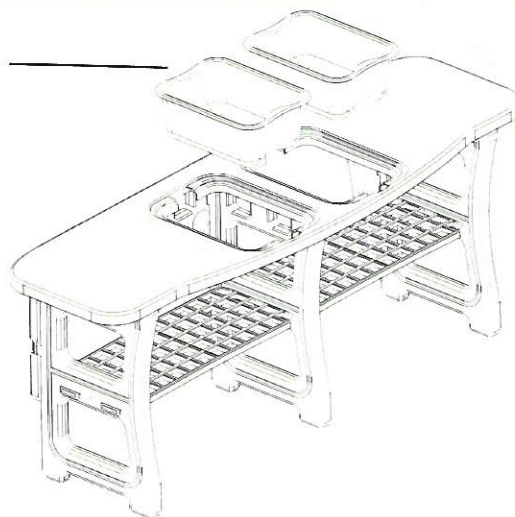


Step 63

Figure 66

Place 2 Grates (44314) into recesses on the
top of the Table. (Figure 66)

ITM# 44314

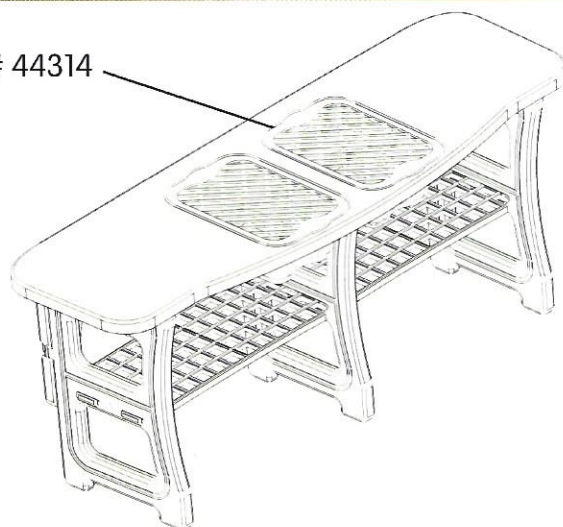


Step 64

Figure 67

Using 3 EasyBolts™, secure entire Potting
Table assembly to the Left Side Walls.
(Figure 67)

EasyBolts™

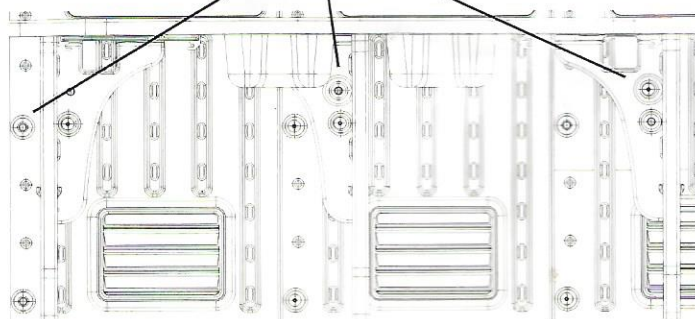

10 Year Limited Warranty

Thinking Outside, LLC in respect of plastic storage buildings manufactured by it (hereinafter referred to as "Products") warrants to you the original purchaser of Products, that subject to the terms and conditions herein contained, the Products are and will be free from defects in materials and workmanship that result in warping, rotting; corroding, flaking, peeling, blistering, or abnormal discoloration of surfaces. This warranty is applicable for 10 years and applies only to the original purchaser of the Product if the Product is used in non-commercial applications. All failures to Products covered by this warranty will be repaired, replaced or restored by Thinking Outside in accordance with the terms and conditions of this warranty as your sole and exclusive remedy. By acceptance and use of the Products you agree with the terms of this warranty, as provided herein.

Products which experience color change due to normal weathering at the sole determination of Thinking Outside are excluded from this warranty (including non-uniform fading and color changes resulting from unequal exposure of panels to the sun and elements). For the purpose hereof "normal weathering" means exposure to ultraviolet sunlight and extremes of temperature and atmosphere which will cause any colored or painted surface to fade, darken, chalk or acquire a surface accumulation of dirt or stains. The severity of these conditions depends on air quality, the geographic location of the property at which the Products are installed, and other local conditions over which Thinking Outside has no control. Thinking Outside shall not be liable for and this warranty does not apply or extend to any failure, defects or damages arising from or connected with, without limitation, misuse, neglect, faulty or improper installation.

This warranty is void if structural parts and components not supplied by Thinking Outside are used. Failure, damage, defects or malfunctions resulting from misuse, abuse, negligence, alteration, accident, lack of proper maintenance, impact of foreign objects, hail, tornado, hurricane, other violent storm, flood, fire, pollutants, chemicals, acts of God and other causes beyond Thinking Outside's control as determined by Thinking Outside in its sole discretion shall not be considered defects under this warranty and are not covered in any way by this warranty. Thinking Outside shall not be liable for inconvenience, labor, loss of time, maintenance, removal or reinstallation of the Products or other incidental, special or consequential damages arising in relation to the purchase or use of the Product. This warranty is void if the surface of the Product is covered with paint or any other foreign material, other than as specifically directed in the owner's manual included with the Product.

The 10-Year Limited Warranty. Non-commercial applications coverage provided by this warranty is extended to cover individuals who are using the Products as homeowners and does not extend to Products purchased by or installed upon property owned by any other entities including, without limitation, corporations, partnerships, limited liability companies, trusts, estates, governmental agencies or bodies, religious organizations, schools, condominiums or co-operative housing arrangements, or installed on apartment buildings or any other multi-unit housing arrangements.

Warranty Claims:

The owner must give prompt notice of any defects to obtain warranty service. Should the Products contain a manufacturing defect promptly contact the Thinking Outside, LLC, Customer Service line at 1-888-896-3001 or by mail at Thinking Outside, LLC 3430 East Jefferson Avenue, Suite 520, Detroit, Michigan 48207 to register the claim with a customer service representative. Thinking Outside will require proof of purchase, Product serial number and a clear photograph of the defective part(s) or actual part(s) requested. Thinking Outside will, at its option, repair or replace such defective part(s) free of charge, including freight charges within North America. Thinking Outside's shipping service will deliver parts under this warranty within 7 to 10 business days. This warranty is not applicable outside North America. In order to ensure warranty coverage you must register your Product within 60 days of purchase. If not registered within 60 days, warranty is void. Warranty registration can be accomplished by calling 1-888-896-3001 or by mailing in the completed Product warranty card.

Shipping Instructions:

If requested for inspection, defective parts must be shipped to Thinking Outside, LLC 3430 East Jefferson Avenue, Suite 520, Detroit, Michigan 48207. Please include the following information in the package: full name, home address, telephone number, Product model number and part number. When returning Product please use an insured method of delivery such as Fedex insured accordingly, with the signature option, or your preferred courier service. You must pay for return shipment as we will not accept C.O.D. returns or any additional shipping charges.

Thinking Outside reserves the right to discontinue or change any of its Products, including colors, without giving notice to the purchaser. Should a Product covered by this warranty be unavailable Thinking Outside reserves the right to substitute a Product that is of equal quality according to Thinking Outside's sole discretion or to refund the portion of the original price for the defective part of the Product reflective of its original contribution to the cost of the Product.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, LIABILITIES, OBLIGATIONS OF THINKING OUTSIDE EITHER EXPRESSED OR IMPLIED, EXCEPT THAT THE DURATION OF ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN TIME TO THE DURATION OF THIS WARRANTY. THINKING OUTSIDE SHALL IN NO EVENT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL OR SPECIAL DAMAGES OF ANY KIND FOR BREACH OF ANY EXPRESS WRITTEN OR ORAL OR IMPLIED WARRANTY ON PRODUCTS. YOUR EXCLUSIVE REMEDY SHALL BE ENFORCEMENT OF THIS WARRANTY UPON THE TERMS AND CONDITIONS HEREIN CONTAINED. NO REPRESENTATIVE OF THINKING OUTSIDE OR ITS DISTRIBUTORS OR DEALERS IS AUTHORIZED TO MAKE ANY CHANGE OR MODIFICATION TO THIS WARRANTY.